

EPSON STYLUS™ PHOTO RX700 Series

Start Here


Unpacking

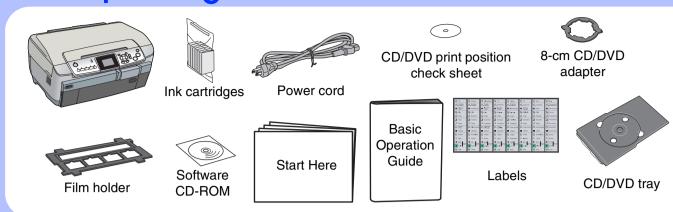


2. Removing All Tape and Applying the Label

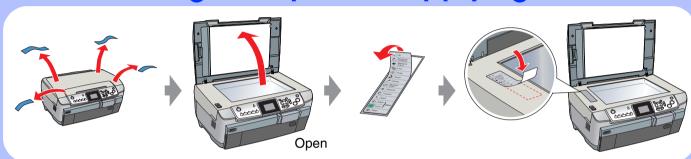


3. Unlocking and Turning On

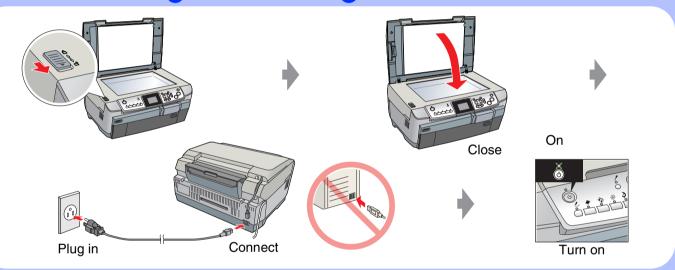

Selecting a Language

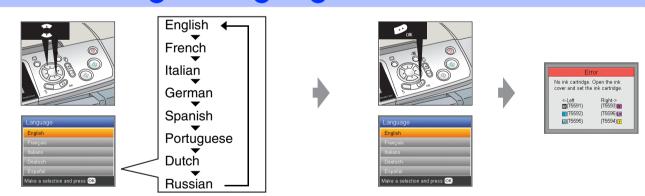


5. Installing Ink Cartridges

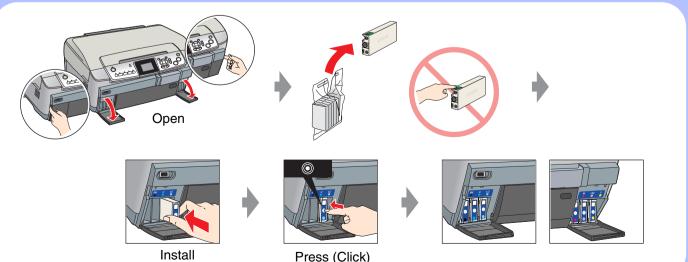


6. Ink Charging



7. Loading Paper

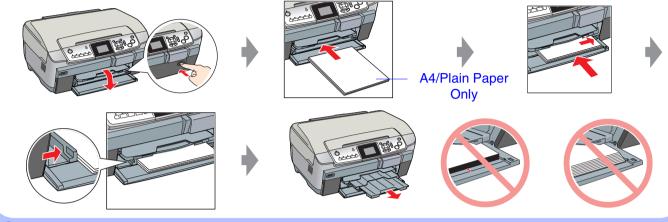


Making a Test Copy

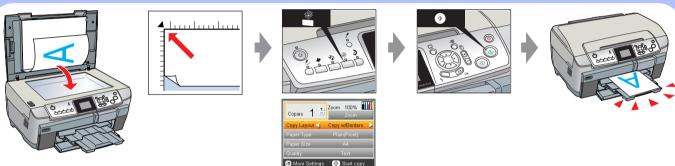

Connecting to a Computer and Installing the Software




For Windows

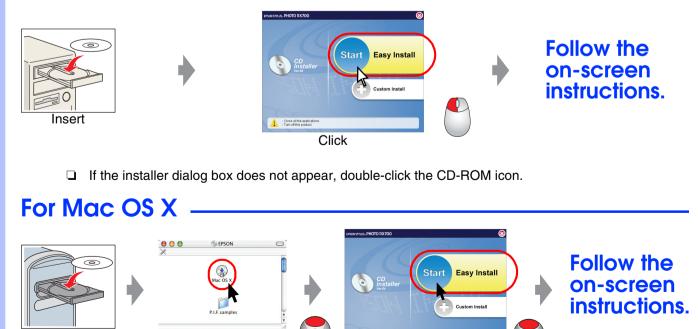


Click

☐ For Mac OS 9 users: Access the following site to download the driver.

 Troubleshooting



securely.

 

- Slide the transportation clamp to the unlocked
- Open the cartridge cover and make sure the ink cartridges were securely inserted until they clicked into place.
- Before loading the paper, remove the paper from the sheet feeder, Fan the stack of paper, then tap it on a flat surface to even the edges.



cable correctly. Make sure that the printer driver and scanner driver have been installed correctly.


Connect the USB

Features

Copying






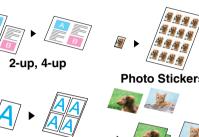

For more information on using the copy functions, see the Basic Operation

Direct Printing and Scanning

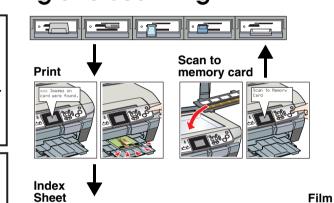

you to do the following: Print directly from a memory card.

The built-in memory card slot allows

 
- (See the Basic Operation Guide.)
- ☐ Scan and save an image directly to a memory card. (See the Basic Operation Guide.)
- ☐ Transfer the data stored on a memory card to your computer. (See the online User's Guide.)

Getting


Information

More






Copy Photo

 

Scanning

2500



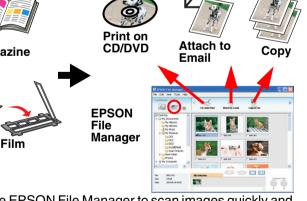

You can use EPSON File Manager to scan images quickly and easily, then attach them to e-mail, make copies, and so on.

Printing





postcards, and posters







User's Guide

