

"U-xx" refers to a page number of the User's Guide.

"N-xx" refers to a page number of the EMP NetworkManager Operation Guide.

"M-xx" refers to a page number of the EMP Monitor Operation Guide.

A

A/V Mute	U-55, U-84
Abs. Color Temp.	U-79
Access Lamp	U-18
Actual image size	U-15
Adjusting Computer Images	U-74
Adjusting the Horizontal Position	U-39
Adjusting the Size	U-40
Adjusting the Sync	U-76
Adjusting the Tracking	U-75
Adjusting the Vertical Position	U-38
Air exhaust vent	U-6
Air filter	U-6, U-7
Air intake vent	U-6, U-7
All Reset	U-86
Aspect Ratio	U-62
Audio	U-83
Audio cable	U-28
[Audio Out] port	U-10, U-29
Audio Output	U-83
Audio output port	U-28
[Audio] port	U-10, U-28
Auto Focus	U-35, U-40, U-81
Auto Quick Corner	U-40, U-81

Auto Setup	U-74, U-80
Auto V-Keystone	U-38, U-82

B

Blackboard	U-53
Brightness	U-79
Brightness Control	U-83
Button Functions	M-6

C

Card slot	U-7, U-16
Ceiling	U-14
Cleaning the Air Filters and Air Intake Vents	U-119
Cleaning the Lens	U-119
Cleaning the Projector Case	U-119
Color Adjustment	U-79
Color Intensity	U-79
Color Mode	U-77, U-79
COM Port	U-85
Community Name	N-10
Component Video	U-26
Component video cable	U-128
Composite Video	U-25
Computer cable	U-20

Computer1 Input	U-80
[Computer1/Component] port	U-10
Computer2 Input	U-80
[Computer2/Component] port	U-10
Configuration Menu	U-78
Connecting to a Computer	U-19
Connecting to a Video Source	U-25
Connecting to the Projector	N-6
Consumables	U-128
Contrast	U-79
[Control (RS-232C)] port	U-10
Control Panel	U-6, U-9
Cross	U-56

D

Destination address	N-9
Detects sources	U-35
DHCP	N-7
Digital Camera	U-30
Direct Power Off	U-45
Direct Power ON	U-85
Display	U-84
Display Background	U-84
Dynamic	U-77, U-79



E

Eject button	U-17
Eligible Computers	U-19
EMP Monitor	M-2
EMP NetworkManager	N-2
Enlarge	U-56
Entering a Password	U-48
Entering Number	U-92
ESC/VP21	U-132
Extended	U-84
External Monitor	U-23
E-Zoom	U-56

F

Focus	U-68
Focus Adjustment	U-68
Foot adjust lever	U-6, U-7
Foot Adjustment	U-38
Freeze	U-56
Front adjustable foot	U-6, U-7, U-38

G

Gateway address	N-7
-----------------------	-----

H

H/V-Keystone	U-82
--------------------	------

Handle	U-6
HDTV	U-135
Height	U-82
Height Correction	U-71
Help	U-94
High	U-83
H-Keystone	U-82
How to toggle output settings	U-36

I

Image	U-79
Indicator	U-9, U-96
Info	U-86
Input Signal	U-86
Input/Output Port	U-7, U-10
Inserting the Batteries	U-11
Installing the Software	N-3
Internal temperature status	U-96
IP Address	U-91, N-7

K

Keystone	U-68, U-82
----------------	------------

L

Lamp cover	U-6
Lamp Hours	U-86
Lamp Replacement Period	U-120

 
Lamp status	U-96
Lamp/Temp Indicator	U-98
Lamp-Hours Reset	U-86
Language	U-85
Lens cover	U-6, U-33
Lens cover cord stopper	U-7
Living Room	U-77, U-79
Locking the control panel button	U-66
Locking the remote control buttons	U-66
Low	U-83

M

Mail Notification Function	N-8
Menu	U-78
Message	U-84
Mini D-Sub 15-pin Port	U-20
[Monitor Out] port	U-10
Monitoring and Controlling Projector	M-2
Monitoring and Controlling Projector (for the EMP-830)	U-89
Mouse Pointer	U-21

N

Network	U-85
Network Cable Connections	U-24
Network Connecting Setting	U-90



Network Function U-89
 Network ON U-85
 Network port U-7
 Numeric keypad U-8

O

Operating status of the projector U-96
 Operating temperature U-136
 Operation U-85
 Operation Button Lock Function U-66
 Operation Lock U-82
 Optional Accessories U-128
 Overheating U-97

P

Part Names and Functions U-6
 Password Protect U-47
 Password Protect sticker U-49
 Pause U-56
 PC cable U-128
 PC card U-16
 PinP (Picture in Picture) Function U-57
 PinP Options U-83
 Pointer U-83
 Pointer Function U-58
 Pointer Speed U-83
 Position U-80

Power cable U-33
 Power Indicator U-96
 Power inlet U-7
 Presentation U-77, U-79
 Preset U-80
 Preset Function U-60
 Preventing Theft U-47
 Preview Function U-52
 Problem U-99
 Problem Notification E-mail Message N-12
 Problem Solving U-96
 Progressive U-80
 Projection U-84
 Projection area U-41
 Projection Distance U-15
 Projector Icons N-5
 Projector ID U-84
 Projector ID/Remote Control ID U-64
 Projector List M-7
 Projector name N-7

Q

Quick Corner U-69, U-72, U-82
 Quick Setup U-40, U-81
 Quick Setup Options U-81

R

[R/C] switch U-8, U-12
 Real display U-62
 Rear U-84
 Rear adjustable foot U-7, U-39
 Refresh Rate U-86
 Register projector M-3
 Remote Control U-8, U-11, U-21
 Remote control cable U-128
 Remote control light-emitting area U-8
 Remote control light-receiving area U-6, U-7
 Remote Operating Range U-12
 [Remote] port U-10
 Replacing the Air Filter U-124
 Replacing the Lamp U-121
 Request Code U-47
 Reset U-79, U-81, U-83, U-85, U-86
 Resetting the Lamp Operating Time U-123
 Resized display U-62
 Resolution U-80, U-86, U-135
 RGB Video U-27

S

Screen U-128
 Screen Size U-15
 Security lock U-7



Setting	U-81
Setting Network Parameters	N-7
Setting Up the Projector	U-14
Sharpness	U-79
Signal	U-80
Sleep Mode	U-85
SMTP server	N-9
SNMP	U-89, N-10
Source	U-37, U-86
Speaker	U-6, U-28, U-29
Specifications	U-136
sRGB	U-77, U-79
Standby Mode	U-85
Startup Options	U-81
Startup Screen	U-84
Storage temperature	U-136
Subnet mask	N-7
Sub-screen	U-57
Subscreen Image	U-83
Supported Monitor Displays	U-135
Suspension bracket fixing point	U-7, U-138
S-Video	U-26
[S-Video] port	U-10
Sync Info	U-86
Sync.	U-80

T

Theatre	U-77, U-79
Tint	U-79
Tone	U-83
Tracking	U-80
Translucent screen	U-14
Trap IP address	N-10
Turning the Projector Off	U-44
Turning the Projector On	U-33

U

Uninstalling the Software	N-4
USB cable	U-21, U-30
USB Connection	U-133
USB hub	U-30
USB mouse	U-21
USB storage device	U-30
[USB TypeA] port	U-10
[USB TypeB] port	U-10
USB-compatible hard disc	U-30
User's Logo	U-55, U-84, U-125
Using the Configuration Menus	U-87

V

Vertical and Horizontal Correction	U-70
[Video] port	U-10
Video Signal	U-81, U-86
V-Keystone	U-82
Volume	U-46, U-83

W

Wall Shot	U-40, U-53, U-81
Wide-screen Image	U-63
Wireless LAN card	U-16
Wireless Mouse Function	U-21

Z

Zoom Adjustment	U-40
-----------------------	------

