

"U-xx" refers to a page number of the User's Guide.

"E-xx" refers to a page number of the EasyMP Operation Guide.

"M-xx" refers to a page number of the EMP Monitor Operation Guide.

## Symbols

.bmp .....	E-30, E-45
.gif .....	E-45
.jpg .....	E-30, E-45
.mpg .....	E-30, E-45
.mrk .....	E-45
.png .....	E-45
.sit .....	E-38, E-45
.wav .....	E-30

## A

A/V Mute .....	U-55, U-84
Abs. Color Temp. ....	U-79
AC-3 .....	E-30, E-45
Access Lamp .....	U-18
Actual image size .....	U-15
Adjusting Computer Images .....	U-74
Adjusting the Horizontal Position .....	U-39
Adjusting the Size .....	U-40
Adjusting the Sync .....	U-76
Adjusting the Tracking .....	U-75
Adjusting the Vertical Position .....	U-38
Advance .....	E-43
Air exhaust vent .....	U-6
Air filter .....	U-6, U-7

Air intake vent .....	U-6, U-7
All Reset .....	U-86
Animation .....	E-30, E-42
Aspect Ratio .....	U-62
Audio .....	U-83
Audio cable .....	U-28
[Audio Out] port .....	U-10, U-29
Audio Output .....	U-83
Audio output port .....	U-28
[Audio] port .....	U-10, U-28
Authentication .....	E-18
Auto Focus .....	U-35, U-40, U-81
Auto Quick Corner .....	U-40, U-81
Auto Setup .....	U-74, U-80
Auto V-Keystone .....	U-38, U-82
Automatic ESSID Search .....	E-27
Autorun .....	E-38

## B

Background Color .....	E-32
Background music .....	E-41
BGM .....	E-32
Blackboard .....	U-53
Brightness .....	U-79, E-6
Brightness Control .....	U-83

Button Functions .....	M-6
------------------------	-----

## C

Card slot .....	U-7, U-16
CardPlayer .....	E-44, E-46
Ceiling .....	U-14
Cell .....	E-32
Cleaning the Air Filters and Air Intake Vents .....	U-119
Cleaning the Lens .....	U-119
Cleaning the Projector Case .....	U-119
CMYK colour format .....	E-30, E-45
Color Adjustment .....	U-79
Color Intensity .....	U-79
Color Mode .....	U-77, U-79, E-6
COM Port .....	U-85
Component Video .....	U-26
Component video cable .....	U-128
Composite Video .....	U-25
Computer cable .....	U-20
Computer1 Input .....	U-80
[Computer1/Component] port .....	U-10
Computer2 Input .....	U-80
[Computer2/Component] port .....	U-10
Configuration Menu .....	U-78



Connecting to a Computer ..... U-19  
 Connecting to a Video Source ..... U-25  
 Consumables ..... U-128  
 Continuous Play ..... E-59  
 Contrast ..... U-79, E-6  
 [Control (RS-232C)] port ..... U-10  
 Control Panel ..... U-6, U-9  
 Create a Scenario Easily ..... E-40  
 Cross ..... U-56

## D

Destination address ..... E-66  
 Detects sources ..... U-35  
 Digital Camera ..... U-30  
 Direct Power Off ..... U-45  
 Direct Power ON ..... U-85  
 Display ..... U-84  
 Display Background ..... U-84  
 Display Conditions ..... E-59  
 Display order ..... E-59  
 DPOF ..... E-45  
 Dynamic ..... U-77, U-79

## E

Easy Menu ..... E-48  
 EasyWeb ..... E-62  
 Editing a Scenario ..... E-54  
 Effect ..... E-59  
 Eject button ..... U-17

Eligible Computers ..... U-19  
 EMA ..... E-33  
 EMP Monitor ..... M-2  
 EMP SlideMaker2 ..... E-28, E-29  
 Encrypted Transmissions ..... E-19  
 Encryption ..... E-18  
 Encryption key ..... E-24  
 Enlarge ..... U-56  
 Entering a Password ..... U-48  
 Entering Characters and Numerals ..... E-26  
 Entering Number ..... U-92  
 ESC/VP21 ..... U-132  
 Extended ..... U-84  
 External Monitor ..... U-23  
 E-Zoom ..... U-56, E-6

## F

Firewall ..... E-18  
 Focus ..... U-68  
 Focus Adjustment ..... U-68  
 Foot adjust lever ..... U-6, U-7  
 Foot Adjustment ..... U-38  
 Format ..... E-24  
 Freeze ..... U-56  
 Front adjustable foot ..... U-6, U-7, U-38

## G

 
Group ..... E-11  
 Guide mode ..... E-48

## H

H/V-Keystone ..... U-82  
 Handle ..... U-6  
 HDTV ..... U-135  
 Height ..... U-82  
 Height Correction ..... U-71  
 Help ..... U-94  
 High ..... U-83  
 Highest image quality ..... E-32  
 H-Keystone ..... U-82  
 How to toggle output settings ..... U-36

## I

If a Problem Notification is Sent by Mail ..... E-67  
 Image ..... U-79, E-30  
 Image and Movie Files ..... E-56  
 Image Quality ..... E-32  
 Indicator ..... U-9, U-96  
 Info ..... U-86  
 Input Signal ..... U-86  
 Input/Output Port ..... U-7, U-10  
 Inserting the Batteries ..... U-11  
 Internal temperature status ..... U-96  
 IP Address ..... U-91, E-8  
 IP address of SMTP server ..... E-66  
 IP connect mode ..... E-8



## J

JPEG .....E-32, E-45

## K

Key ID ..... E-24

Keystone .....U-68, U-82

## L

Lamp cover .....U-6

Lamp Hours .....U-86

Lamp Replacement Period .....U-120

Lamp status .....U-96

Lamp/Temp Indicator .....U-98

Lamp-Hours Reset .....U-86

Language .....U-85

LEAP .....E-21, E-25

Lens cover .....U-6, U-33

Lens cover cord stopper .....U-7

Linear PCM .....E-30, E-45

Living Room .....U-77, U-79

Locking the control panel button .....U-66

Locking the remote control buttons .....U-66

Low .....U-83

## M

Mail Notification Function ..... E-65

Menu .....U-78

Message .....U-84

Mini D-Sub 15-pin Port .....U-20

[Monitor Out] port .....U-10

Monitoring and Controlling Projector .....M-2

Monitoring and Controlling Projector (for the  
EMP-830) .....U-89

Mouse Pointer .....U-21

MPEG .....E-45

MPEG-1 Layer 2 .....E-30, E-45

MPEG2-PS .....E-30, E-45

## N

Names and Functions of Each Icon .....E-3

Network .....U-85

Network Cable Connections .....U-24

Network Connecting Setting .....U-90

Network Function .....U-89

Network ON .....U-85

Network port .....U-7

Network Screen .....E-2

Network setup .....E-63

Notification Event .....E-66

Numeric keypad .....U-8

## O

Operating status of the projector .....U-96

Operating temperature .....U-136

Operation .....U-85

Operation Button Lock Function .....U-66

Operation During a Presentation .....E-53

Operation Lock .....U-82

Operation Mode .....E-59

Optional Accessories .....U-128

Overheating .....U-97

## P

Part Names and Functions .....U-6

Password .....E-25

Password Protect .....U-47

Password Protect sticker .....U-49

Pause .....U-56

PC cable .....U-128

PC card .....U-16

PinP (Picture in Picture) Function .....U-57

PinP Options .....U-83

Play Movie .....E-50

Play Slideshow .....E-50

Playing a Scenario .....E-52

Pointer .....U-83

Pointer Function .....U-58

Pointer Speed .....U-83

 
Port Number .....E-66

Position .....U-80

Power cable .....U-33

Power Indicator .....U-96

Power inlet .....U-7



PowerPoint ..... E-30  
 Presentation ..... U-77, U-79, E-28, E-44  
 Preset ..... U-80  
 Preset Function ..... U-60  
 Preventing Theft ..... U-47  
 Preventing Unauthorised Access ..... E-20  
 Preview ..... E-41  
 Preview Function ..... U-52  
 Priority gateway ..... E-63  
 Problem ..... U-99  
 Problem Solving ..... U-96  
 Progressive ..... U-80  
 Progressive format ..... E-30, E-45  
 Projecting Image and Movie Files ..... E-56  
 Projecting Scenarios ..... E-52  
 Projection ..... U-84  
 Projection area ..... U-41  
 Projection Distance ..... U-15  
 Projector Control ..... E-64  
 Projector ID ..... U-84  
 Projector ID/Remote Control ID ..... U-64  
 Projector List ..... M-7  
 Projector Setup ..... E-63  
 PSK ..... E-25

## Q

Quick Corner ..... U-69, U-72, U-82  
 Quick mode ..... E-48, E-50  
 Quick Setup ..... U-40, U-81

Quick Setup Options ..... U-81

## R

[R/C] switch ..... U-8, U-12  
 Real display ..... U-62  
 Rear ..... U-84  
 Rear adjustable foot ..... U-7, U-39  
 Refresh Rate ..... U-86  
 Register projector ..... M-3  
 Remote Control ..... U-8, U-11, U-21  
 Remote control cable ..... U-128  
 Remote control light-emitting area ..... U-8  
 Remote control light-receiving area ..... U-6, U-7  
 Remote Operating Range ..... U-12  
 [Remote] port ..... U-10  
 Repeat ..... E-39  
 Replacing the Air Filter ..... U-124  
 Replacing the Lamp ..... U-121  
 Request Code ..... U-47  
 Reset ..... U-79, U-81, U-83, U-85, U-86  
 Resetting the Lamp Operating Time ..... U-123  
 Resized display ..... U-62  
 Resolution ..... U-80, U-86, U-135  
 RGB Video ..... U-27  
 Rotating the Image ..... E-51

## S

Scenario Folder ..... E-32

Scenario Name ..... E-31  
 Scenario Preview ..... E-41  
 Scenarios ..... E-29  
 Screen ..... U-128  
 Screen Size ..... U-15  
 Screen Switching ..... E-53  
 Screen switching time ..... E-59  
 Security lock ..... U-7  
 Sending a Scenario ..... E-38  
 Setting ..... U-81  
 Setting Up the Projector ..... U-14  
 Sharpness ..... U-79  
 Signal ..... U-80  
 Sleep Mode ..... U-85  
 Slideshow ..... E-30, E-57  
 SNMP ..... U-89, E-68  
 SNMP trap IP address ..... E-68  
 Source ..... U-37, U-86  
 Speaker ..... U-6, U-28, U-29  
 Specifications ..... U-136  
 sRGB ..... U-77, U-79  
 Standby Mode ..... U-85  
 Startup Options ..... U-81  
 Startup Screen ..... U-84  
 Stopping Playing ..... E-53  
 Storage temperature ..... U-136  
 Sub-screen ..... U-57  
 Subscreen Image ..... U-83  
 Supported Monitor Displays ..... U-135



Suspension bracket fixing point .....U-7, U-138  
S-Video .....U-26  
[S-Video] port .....U-10  
Sync Info .....U-86  
Sync. ....U-80

## T

Theatre .....U-77, U-79  
Tint .....U-79  
Tone .....U-83  
Toolbar .....E-3  
Tracking .....U-80  
Translucent screen .....U-14  
Turning the Projector Off .....U-44  
Turning the Projector On .....U-33

## U

USB cable .....U-21, U-30  
USB Connection .....U-133  
USB hub .....U-30  
USB mouse .....U-21  
USB storage device .....U-30  
[USB TypeA] port .....U-10  
[USB TypeB] port .....U-10  
USB-compatible hard disc .....U-30  
User name .....E-25  
User's Logo .....U-55, U-84, U-125  
Using the Configuration Menus .....U-87

## V

Vertical and Horizontal Correction .....U-70  
[Video] port .....U-10  
Video Signal .....U-81, U-86  
View Image .....E-50  
V-Keystone .....U-82  
Volume .....U-46, U-83

## W

Wall Shot .....U-40, U-53, U-81  
Web Browser .....E-62  
WEP .....E-21  
WEP encryption .....E-24  
Wide-screen Image .....U-63  
Wireless LAN card .....U-16  
Wireless Mouse Function .....U-21  
WPA .....E-21, E-25

## Z

Zoom Adjustment .....U-40

