

EPSON PERFECTION™ V500 PHOTO

Start Here • Démarrez ici • Hier starten • Hier beginnen •
 Inizia qui • Para empezar • Começar por aqui •
 Buradan Başlayın • Ξεκινήστε εδώ




411068500


Printed in XXXXXX XX.XX-XX XXX



1.

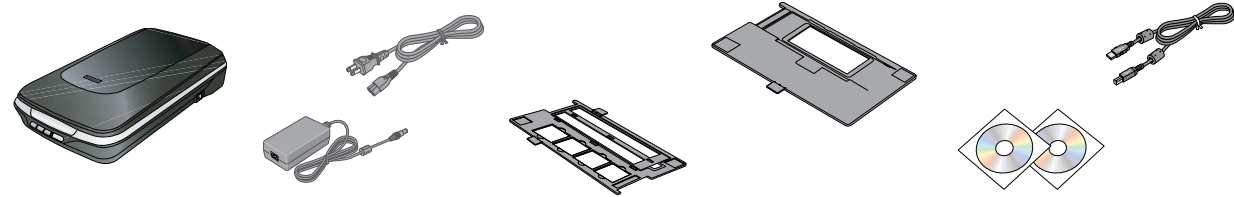


2.

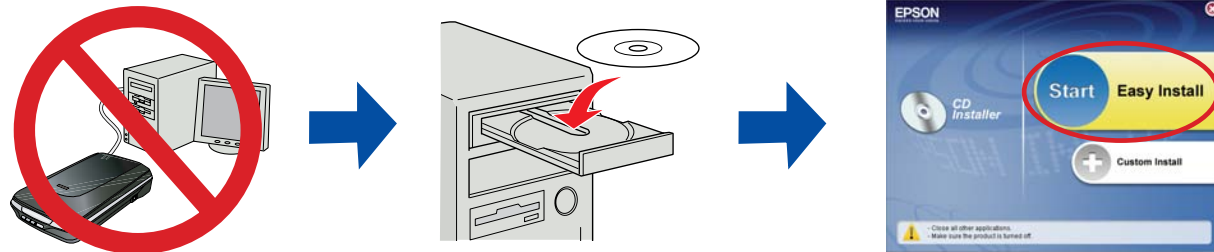





Do not connect the USB cable yet.
 Ne raccordez pas encore le câble USB.
 Schließen Sie das USB-Kabel noch nicht an.
 Sluit de USB-kabel nog niet aan.
 Non collegare adesso il cavo USB.

No conecte todavía el cable USB.
 Não ligue ainda o cabo USB.
 USB kablosunu henüz takmayın.
 Μην συνδέσετε ακόμα το καλώδιο USB.

3.

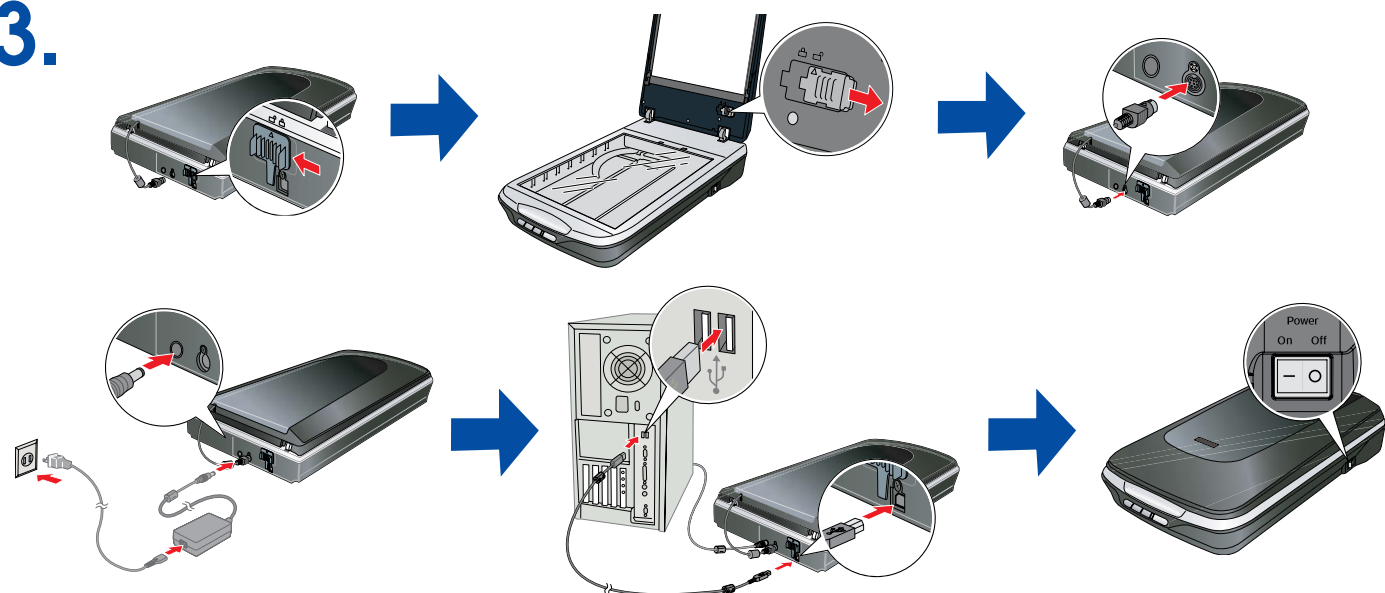

4.

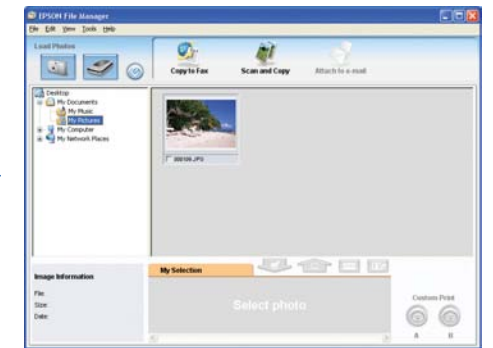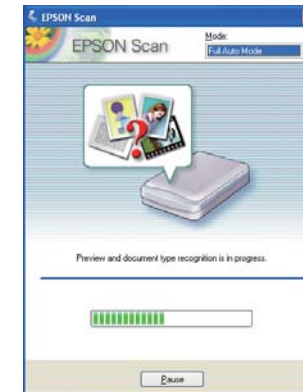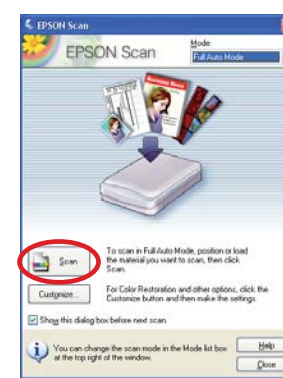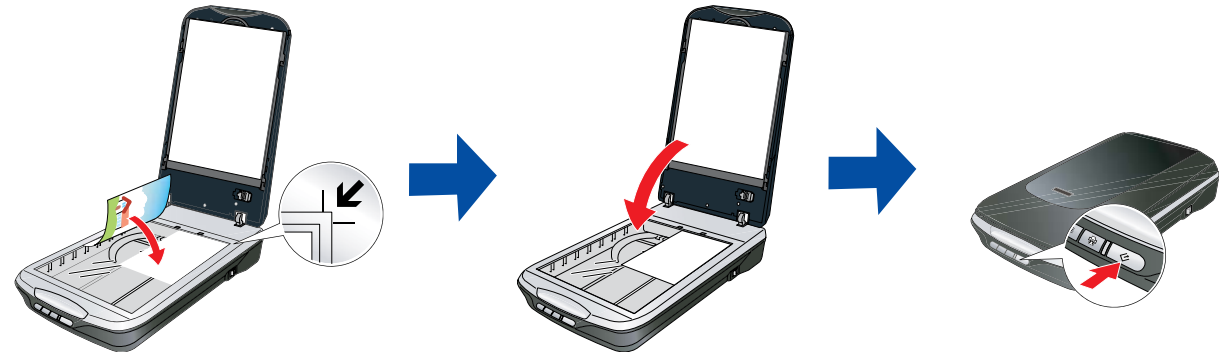

Getting More Information • Obtenir des informations complémentaires •
 Weitere Informationsquellen • Meer informatie •
 Ulteriori informazioni • Más información •
 Obter Mais Informações • Daha Fazla Bilgi Alma •
 Περισσότερες πληροφορίες

