

AL-MX200 Series Software Installation Guide

NPD4758-00 EN

Software Installation

Note for USB connection:

Do not connect the USB cable until you are instructed to do so.



□ *If this screen appears, click* **Cancel**.



Note for Eternet connection:

Before software installation, connect and turn on the printer.

Note for wireless connection (AL-M200DWF only):

See Wireless Network Setup Guide.

Installing Print Drivers on Computers Running Windows

1. Insert the Software Disc.



2. Select a language from the list box at the bottom left of the screen, and then click **Easy Install**.



3. If you agree to the terms of the **SOFTWARE LICENSE AGREEMENT**, select **Agree** and click **Next**.



4. Click Installing Drivers and Software.

Macromedia Flash Player 8			x
		EPS	ON
Easy Install Navi			
Welcome!		Language:	
		English	•
Easy Setup	Advance Setup		
1→2→3 Start Setup	Advance Tools		
	More Information		
Press this button when you set the printer first. A series of movies helps you to set the printer easily. The setting procedure includes the following: • Setting the Printer Device	• User's Guide		
	<u>Trouble Shooting</u>	<u>I Guide</u>	
Installing Drivers and Software	Product Features	2	
		🗱 Exit	

For setting USB connection, go to "USB connection setup" on page 5. For setting Ethernet connection, go to "Ethernet connection setup" on page 6.

USB connection setup

1. Connect the printer and computer with a USB cable and turn on the printer.



2. Select **Personal Installation (USB)** and click **Next**.

EPSON Printer Installation	
	EPSON
Install Printer Driver and Software	
Choose an installation type, Printer will be installed.	
Personal Installation (USB) Install the printer for use on this computer.	
©N <u>e</u> twork Installation	
Install the printer for use on a network.	
© <u>S</u> oftware	
Install the printer support software.	
	Version1.0
Language	Exit

3. Click **Finish**.



Ethernet connection setup

1. Select Network Installation and click Next.



2. Select the printer and click **Next**.

SON Printer Installation	n		×
			EPSON
Install printe	er driver ar	nd software	Select Printer
Select Printer		,	Select the printer you want to install
Printer Name	IP Address	Port Name	
EPSON AL-MX200	1012.0185	10	If your printer is not listed
<u>B</u> efresh		Add Printer	 Ensure cable are connetced to th computer or network Ensure printer is turned on 3) Click "Refresh", Or Click "Add Printer".
		Manually add using IP address	
📃] am setting up this p	printer on a server		
		< <u>B</u> ack	<u>N</u> ext > Cancel

Note:

- □ If the target printer is not displayed on the list, click **Refresh** to refresh the list, or click **Add Printer** to add a printer to the list manually.
- □ If you have installed this printer on the server computer, select **I am setting up this printer on a** server check box.
- □ When using AutoIP, 0.0.0.0 is displayed in the installer. Before continuing, enter a valid IP address.

3. Specify the printer settings and click **Next**.

		EPSON
stall printe	r driver and software	Printer Settings
er Printer Setti	ngs	3
<u>P</u> rinter	-	
Printer Name Port Name		
Printer Name	Port Name	You can get the printer name and
Printer Name EPSON AL-MX200	Port Name D	You can set the printer name and the printer share name, etc.
Printer Name EPSON AL-MX200 tinter Name:	Port Name D EPSON AL-MK200DWF-000002	You can set the printer name and the printer share name, etc.
Printer Name EPSON AL-MX200 rinter Name: Share this printer w	Port Name D EPSON AL-MX2000WF-00002 ith other computers on the network	You can set the printer name and the printer share name, etc.
Printer Name EPSON AL-MX200 rinter Name: Share this printer w pare Name:	Port Name D EPSON AL-MX2000WF-00002 ith other computers on the network EPSON AL-MX2000WF-00002	You can set the printer name and the printer share name, etc.
Printer Name EPSON AL-MX200 (inter Name: Share this printer w pare Name:	Port Name D EPSON AL-MX200DWF-00002 ith other computers on the network EPSON AL-MX200DWF-00002 Jefault for printing	You can set the printer name and the printer share name, etc.
Printer Name EPSON AL-MK200 jinter Name: Share this printer w pare Name: Set this printer as g	Port Name D EPSON AL-MX200DWF-00002 ith other computers on the network EPSON AL-MX200DWF-00002 jefault for printing	You can set the printer name and the printer share name, etc.

1	Enter the printer name.
2	Select the Share this printer with other computers on the network check box if you want to share the printer on the network.
3	Select the Set this printer as default for printing check box if you want to use the printer as a default printer for printing.
4	Select the Set this printer as default for scanning check box if you want to use the printer as a default printer for scanning.
5	Select the FAX Driver check box if you want to use a fax function on the printer.
6	Select the Install PS printer driver check box if you want to install the PS printer driver.

EPSON AL-MX200DNF_DWF - InstallShield Wizard	×	
	EPSON	
Software ♥ Support Tools ♥ Launcher ♥ Fax and Scan Utility	OK OK OK Select the software that you want to install.	
Description Including: Status Monitor and Printer Setting	ng Utility	
Change Destination Folder C:\Program Files\EPSON_P28		
	< Back Install Cancel	

4. Select the software and documentation to install and click **Install**.

Note:

To change the folder to install in, click **Browse***.*

5. Click **Finish**.



See "Printing a Test Page" on page 17.

Installing Print Drivers on Computers Running Mac OS X

Installing a print driver

1. Insert the Software Disc.



- 2. Double-click the executable file for installing the software you want to install.
- 3. Click **Continue**.

900	Install Epson AL-MX200DNF_DWF Welcome to the Epson AL-MX200DNF_DWF Installer
Introduction License Destination Se Installation Ty	You will be guided through the steps necessary to install this software.
Installation Summary	interinduction and a so
5	
1 and	Go Back Continue

4. Select a language and click **Continue**.



5. If you agree to the terms of the software license agreement, click **Agree**.



6. Click Install.



7. Enter the administrator's name and password, and click **OK**.



8. Click Continue Installation.



9. Click **Restart**.



Adding a printer

For USB connection

Note:

Connect the printer and computer with a USB cable and turn on the printer.



1. Open **Print & Fax (Print & Scan** for Mac OS X 10.7).

● ● ● ● P	Print & Fax	
	No printers are available. Click Add (+) to set up a printer.	
Default printer: Default paper size:	Last Printer Used	
Click the lock to prevent further changes.		?

Note:

- **U** You can find **Print & Fax (Print & Scan** for Mac OS X 10.7) in **System Preferences**.
- □ If your printer is already added, go to "Printing a Test Page" on page 17.

2. Click +.

P Show All	rint & Fax	
	No printers are available. Click Add (+) to set up a printer.	
Default printer:	Last Printer Used	
Default paper size:	US Letter	
Click the lock to prevent further changes.		?

3. Click **Default Browser**, select the printer to be used, and click **Add**.

ult Fax	IP Windows	Search
rinter Name		Kind Kind
PSON AL-MX20	00DWF	USB Multifunction
SUN AL-MX20	JUDWF (56:CC:7D)	Bonjour
PSON AL-MX20	OODWF Fax	USB Multifunction
ARCING AREA	14	Annual Trans
- second - second	APresident and	Berginar
other CD2 PM	and server but	Bergeur
Name:	EPSON AL-MX200DWF	
Location:	Administrator's Mac	
Print Using:	Epson AL-MX200DWF PS3	\$

For Ethernet connection

Note:

Confirm your computer is connected on the network.

\varTheta 🔿 🔿 Р	rint & Fax
Show All	٩
• -	No printers are available. Click Add (+) to set up a printer.
Default printer:	Last Printer Used
Default paper size:	US Letter
Click the lock to prevent further changes.	(?

1. Open Print & Fax (Print & Scan for Mac OS X 10.7).

Note:

- **U** You can find **Print & Fax (Print & Scan** for Mac OS X 10.7) in **System Preferences**.
- □ If your printer is already added, go to "Printing a Test Page" on page 17.
- 2. Click +.



3. Select the printer to be used.

For **Bonjour** Click **Default Browser**, select the printer, and click **Add**.

000	Add Prin	iter
3 = (۹ 🐴 🔍	
Default Fax	P Windows	Search
Printer Name		Kind
EPSON AL-MX20	ODWE	USB Multifunction
EPSON AL-MX20	0DWF (56:CC:7D)	Bonjour
EPSUN AL-MAZU	JUDWF Fax	USB Multifunction
LP-3800C-8E43	18	Bergeur
UP-5800C-8E43	La (m)	Brsch TCHP
UP-9800C-8643	LB(Postburget)	Rengeur
Profest - C.D.C.790		Reges
Name: Location:	EPSON AL-MX200DWF (5)	6:CC:7D)
Print Using:	Epson AL-MX200DWF PS	3 +0.003 \$
		Add

For IP Printing

Specify the IP printing settings and click **Add**.

	Add Printer	
ult Fax	P Windows	Search
Protocol:	Line Printer Daemon - LPD	÷) 2
Address:	10.12.0.385	3
	Valid and complete address.	
Queue:		*
	Leave blank for default queue.	
Name:	10.12.0.185	
Location:		
Print Using:	Epson AL-MX200DWF PS3	\$
		Add

Click IP.

1

2	Select Line Printer Daemon - LPD for Protocol.
3	Enter the IP address of the printer.

Printing a Test Page

Print a test page to make sure that the software is correctly installed. The following explains how to print from the typical application.

- 1. Open the file to print in your application.
- 2. From the **File** menu, click **Print**.
- 3. Confirm that the printer is selected and click **Print**.

For Windows:



For Mac OS X:

	Copies: All Pages: All From: 1 to: 1 Paper Size: A4 3 8.26 by 11.69 inches Orientation: 1 TextEdit Print header and footer
--	--

For more information

For details on the software, refer to User's Guide.

