

EN Start Here
FR Démarrez ici
AR ابدأ من هنا
FA از اینجا شروع کنید



© 2012 Seiko Epson Corporation. All rights reserved. Printed in XXXXXX



Important; must be observed to avoid damage to your equipment. Attention: mise en garde à respecter pour éviter d'endommager votre équipement.

Read This First/A lire en premier/اقرأ هذا أولاً/ابتدا این قسمت را بخوانید/اینجا شروع کنید
This product requires careful handling of ink. Ink may splatter when the ink tanks are filled or refilled with ink.

1 Unpacking/Déballage/تفريغ المحتويات/خارج کردن از جعبه/تفريغ المحتويات

Remove all protective materials. Retirez tous les matériaux de protection.
قم بإزالة جميع المواد الواقية. تمام مواد محافظ را جدا کنید.

Do not open the initial setup ink bottle package or the refill ink bottle package until you are ready to fill the ink tank.
لا تقم بفتح عبوة زجاجة حبر الإعداد الأولي أو عبوة زجاجة حبر إعادة الملاء ما لم تكن مستعداً لملاء خزان الحبر.

2 Filling Ink/Ajout d'encre/الحبر/پر کردن جوهر/املء الحبر

Check position. Vérifiez la position.
Unhook. Détachez.
Do not pull the tubes. Ne tirez pas les tubes.

Turn on. Mettez sous tension.
Press for 3 seconds until the light starts flashing.
Charging ink takes about 20 minutes. Wait until the light turns on.

3 Connecting to the Computer/Connexion à l'ordinateur/التوصيل بالكمبيوتر/اتصال به رایانه/التوصيل بالكمبيوتر

Do not connect the USB cable until you are instructed to do so.
لا تقم بتوصيل كابل USB حتى يُطلب منك ذلك.
If the Firewall alert appears, allow access for Epson applications.

Insert. Insérez.
Check and proceed. Vérifiez et poursuivez.
التحقق والتابعة. بررسی کنید و ادامه دهید.

Windows: Select and follow the instructions.
Mac: Select and follow the instructions.
Epson Online Guides contain important information such as troubleshooting.

Use the ink bottles that came with your product.
Epson cannot guarantee the quality or reliability of non-genuine ink.
Utilisez les bouteilles d'encre fournies avec le produit.

Install the ink bottle cap tightly; otherwise ink may leak.
Installez fermement le capuchon de la bouteille de l'encre, faute de quoi l'encre risque de fuir.

Repeat steps 4 to 6 for each ink bottle.
Répétez les étapes 4 à 6 pour chaque bouteille d'encre.

Before printing, be sure to hook the ink tank unit onto the product.
قبل الطباعة، تأكد من ربط مشبك وحدة خزان الحبر فوق المنتج.

Loading Paper and Copying/Chargement du papier et copie/تحميل الورق والنسخ/گذاشتن کاغذ در دستگاه و کپی کردن/تحميل الورق والنسخ

Do not load paper above the mark inside the edge guide.
Load paper with its printable side face up.
Ne chargez pas de papier au-delà du repère à l'intérieur du guide latéral.

The illustrations in this guide may vary depending on the product.
Les illustrations du présent guide peuvent varier en fonction du produit.

Transporting/Transport/نقل والتحميل/حمل و نقل/التنقل

Secure print head. Fixez la tête d'impression.
Set transportation lock. Placez le verrou de transport.
Install securely. Installez fermement.

Keep the product level as you transport it.
After you move it, remove the tape securing the print head and the covers of ink tanks.
Store the covers at the side of the product.

