

Supplemental Information for CD-ROMs

This booklet provides supplemental information about the EPSON EXPRESSION 1640XL Scanner Software CD-ROM and other software CD-ROMs, and includes the following sections.

- Reading PDF Online Manuals
- Software Installation Instructions

Before installing each application, please read the accompanying user documentation. For instructions on accessing and viewing online manuals, see “Reading PDF Online Manuals” below.

Note:

- Some manuals include instructions for the retail version of the software. There may be minor differences between the software described and the software on the CD-ROMs. Please read “Software Installation Instructions” on page 3 for more information about the installation procedure.*
- In some locations, some software may not be included.*

Reading PDF Online Manuals

The following applications include PDF files that function as online manuals:

- Presto![™] PageManager for EPSON
- TextBridge[®] Classic
- Adobe Photoshop[®] 5.0LE .

Installing Acrobat Reader

To read PDF files, you need to install Acrobat Reader on your computer. Follow the directions below.

Windows

1. Insert the EPSON EXPRESSION 1640XL Scanner Software CD-ROM into your CD-ROM drive.
2. In the dialog box that appears, select your preferred language.

If a dialog box does not automatically appear, open the CD folder and double-click Cdsetup.exe, then select your preferred language.

3. Click the Add Software icon, then make sure that “Adobe Acrobat Reader Ver.4.0” is listed with a check mark in the application list.

Note:

Some of the software is selected in the application list by default. If you want to read the PDF files without installing other applications, clear the check marks next to the applications you do not want to install.

4. Click the OK button.

Macintosh

1. Insert the EPSON EXPRESSION 1640XL Scanner Software CD-ROM into your CD-ROM drive.
2. Double-click Reader Installer in the CD-ROM's "Acrobat Reader\English" folder.

After installation, double-click any of the PDF files on the CD-ROM to read them.

Finding the PDF files

Windows

Presto! PageManager for EPSON

You need to install PageManager before you can access the PDF manual for it. See the next section for installation instructions. After installation, the user's guide for PageManager, PageManager User's Manual, appears in the "Presto! PageManager for EPSON" folder.

TextBridge Classic

Insert the TextBridge Classic CD-ROM into your CD-ROM drive. The user's guide for TextBridge, Usrguide.pdf, is located in the "Tbcl20.95\English\Tb_doc" folder.

Adobe Photoshop 5.0LE

Insert the Photoshop CD-ROM into your CD-ROM drive. The user's guide for Photoshop, User Guide.pdf, is located in the "English" folder. Other PDF files contain support information.

Macintosh

Presto! PageManager for EPSON

You need to install PageManager before you can access the PDF manual for it. See the next section for installation instructions. After installation, the user's guide for PageManager, User's Guide.pdf, is located in the "Presto! PageManager for EPSON" folder.

TextBridge Classic

Insert the TextBridge Classic CD-ROM into your CD-ROM drive. The user's guide for TextBridge Classic, Quick Reference-English.pdf, is located in the "TextBridge 3.0 - Documents\English\Quick Reference" folder.

Adobe Photoshop 5.0LE

Insert the Photoshop CD-ROM into your CD-ROM drive. The user's guide for Photoshop, User Guide.pdf, is located in the "English" folder.

Software Installation Instructions

The following instructions explain how to install the software included on the EPSON EXPRESSION 1640XL Scanner Software CD-ROM and other CD-ROMs. Installation instructions are also included in the software documentation.

Note:

There may be minor differences between the software described and what is on this CD-ROM. If the installation instructions in the software documentation differs from the following instructions, please follow the instructions below.

Installing the software

Windows

Programs on the EPSON EXPRESSION 1640XL Scanner Software CD-ROM

You can install most of the programs on the CD-ROM from the EPSON Software Setup dialog box that appears on your screen after you insert the CD-ROM into your CD-ROM drive. See Chapter 3 of the *EXPRESSION 1640XL Setup Guide* for details.

To install EPSON Scan! II, double-click Setup.exe in "Epscan2\English" folder. See EPSON Scan! II's online help for operating instructions.

TextBridge Classic

1. Insert the TextBridge Classic CD-ROM in your CD-ROM drive.
2. In the dialog box that appears, select your preferred language.

If a dialog box does not automatically appear, open the CD folder and double-click Setup.exe, then select your preferred language.

3. Follow the on-screen instructions.

Adobe Photoshop 5.0LE

1. Insert the Photoshop CD-ROM in your CD-ROM drive.
2. Open the CD folder and double-click Setup.exe in "English\Photosle", then follow the on-screen instructions.

Macintosh

Presto! PageManager for EPSON

Double-click the Presto! PageManager Installer#1 icon in the "Presto! PageManager\English\Presto! PageManager Disk1" folder which is located in the EPSON EXPRESSION 1640XL Scanner Software CD-ROM folder.

TextBridge Classic

1. Insert the TextBridge Classic CD-ROM in your CD-ROM drive.
2. Double-click Install TextBridge 3.0 in the "TextBridge Classic 3.0" folder.
3. Select your preferred language and follow the on-screen instructions.

Adobe Photoshop 5.0LE

1. Insert the Photoshop CD-ROM in your CD-ROM drive.

2. Double-click Install Photoshop® LE in the “English\Adobe Photoshop® 5.0LE” folder. Then follow the on-screen instructions.