 















EPSON
EXCEED YOUR VISION

Multimedia Projector


EB-1420Wi

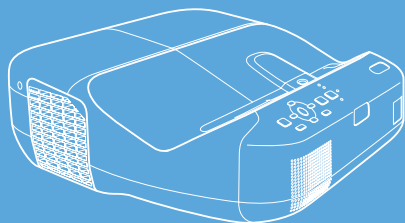


EN	Quick Start Guide	LV	Ātrās darba uzsākšanas pamācība
DE	Kurzanleitung	LT	Trumpas pradžios vadovas
FR	Guide de démarrage rapide	EL	Οδηγός γρήγορης εκκίνησης
IT	Guida di avvio rapido	TR	Hızlı Başlangıç Kılavuzu
ES	Guía de inicio rápido	SL	Priročnik za hitri zagon
PT	Guia de Referência Rápida	HR	Kratke upute
NL	Introductiehandleiding	MK	Прирачник брз почеток
DA	Introduktion	SR	Uputstvo za brz početak
FI	Pika-aloitusopas	CA	Guia d'inici ràpid
NO	Hurtigveiledning	RU	Руководство по быстрой установке
SV	Snabbstartsguide	UK	Коротка інструкція "Початок роботи"
CS	Úvodní příručka	KK	Қысқа іске қосу нұсқаулығы
HU	Bevezetés	ID	Panduan Ringkas
PL	Przewodnik szybkiego startu	AR	دليل البداية السريعة
SK	Stručná príručka	FA	راهنمای سریع برای شروع بکار
BG	Ръководство за бърз старт	ZHS	設定手册
RO	Ghid de pornire rapidă	ZHT	設定説明書
ET	Lühijuhend		

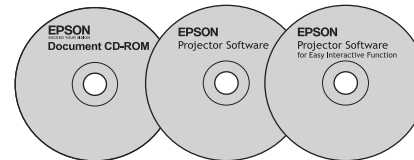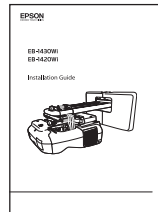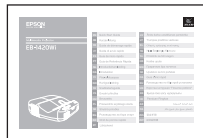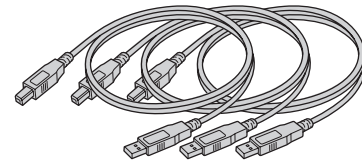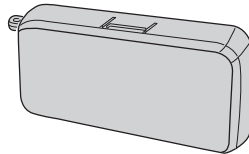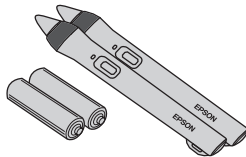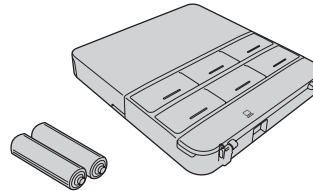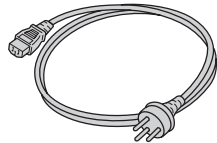         
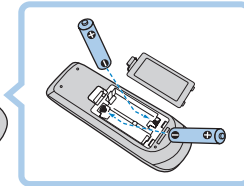 
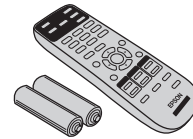 
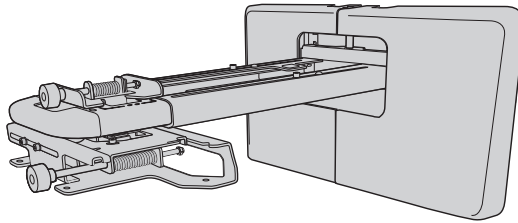 
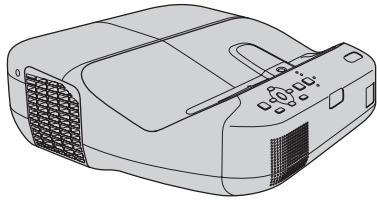 


1


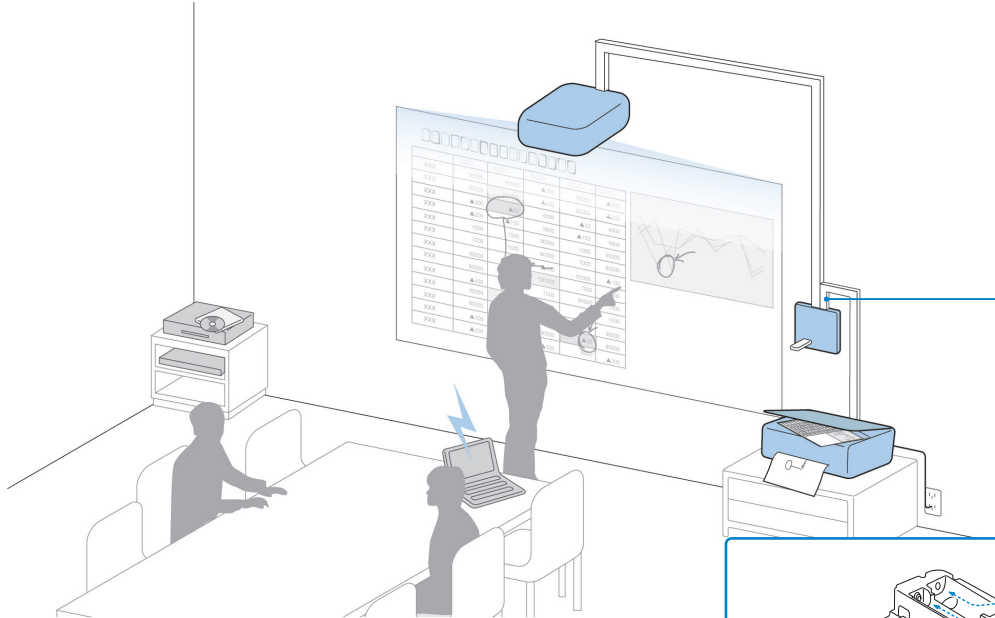 









2

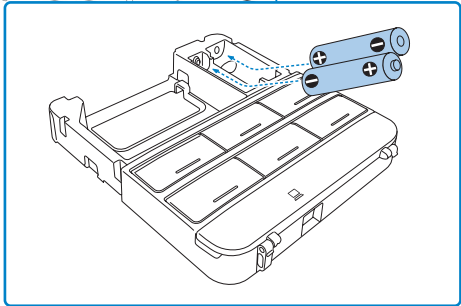 

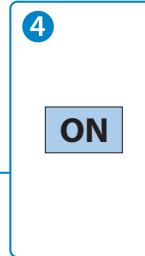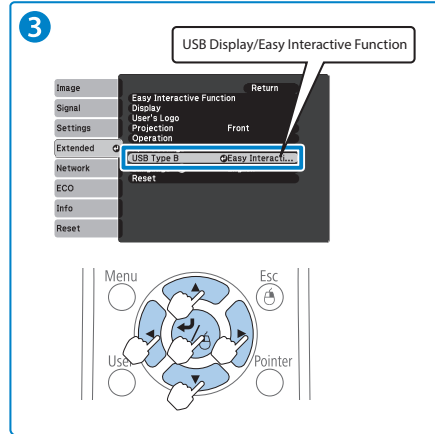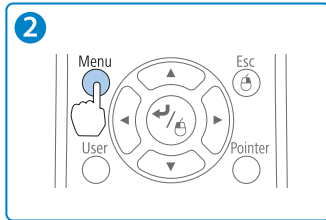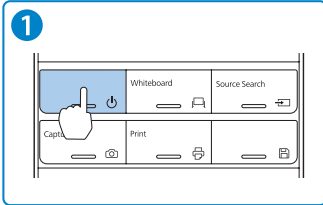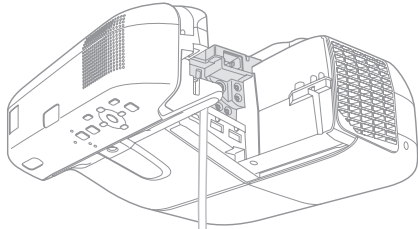     




3

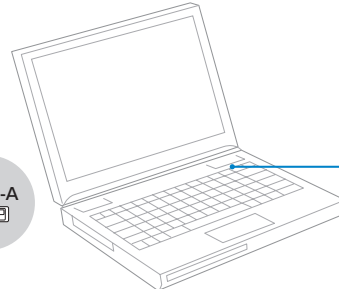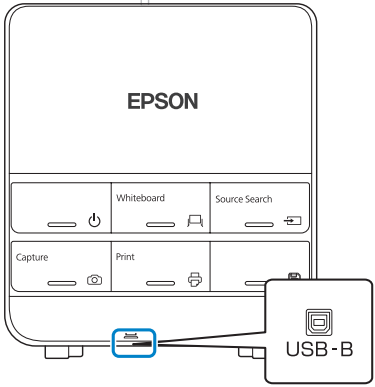  

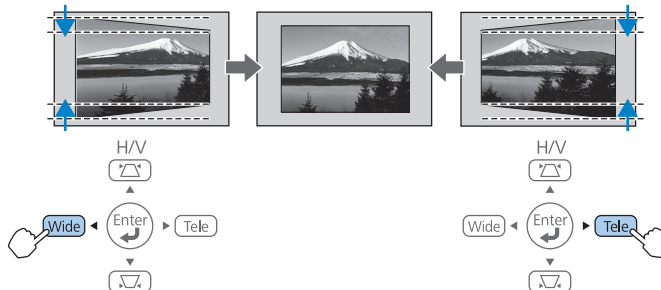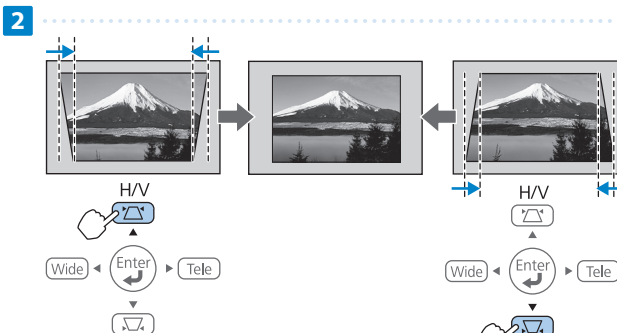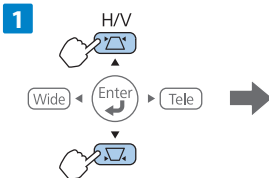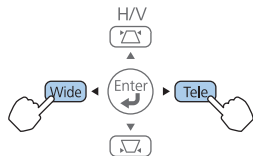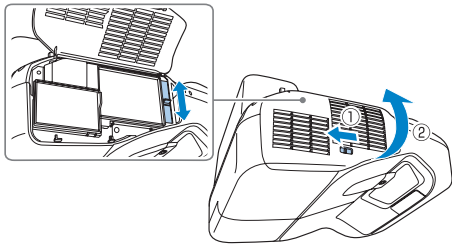       


Easy Interactive Function

   5

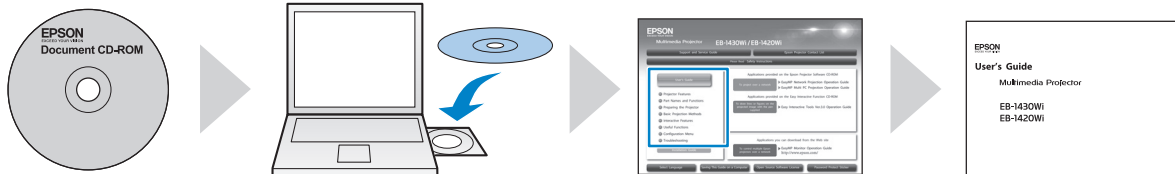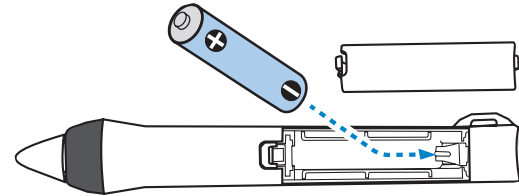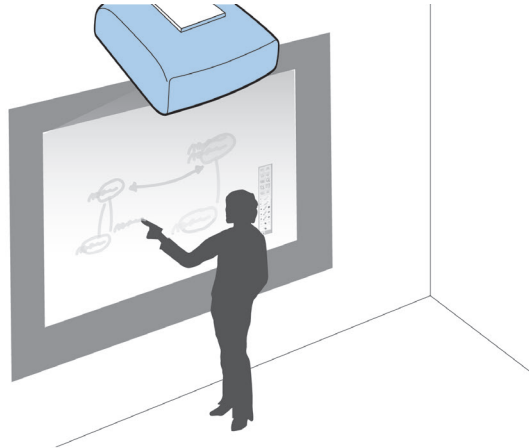


EPSON
User's Guide
Multimedia Projector
EB-1430W
EB-1420W

 
Auto Calibration

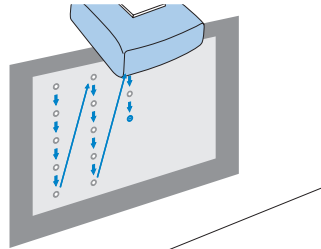

1

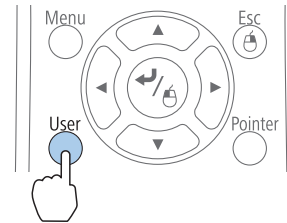 

2

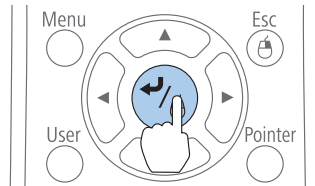 

[Auto Calibration]

Adjust the focus so that the characters are displayed clearly.

Setup the projector so that the patterned image fits within the frame of the screen.

 
Calibration starts when preparations are complete. Do you want to continue?

Yes


No

6



Drawing (Whiteboard Mode)

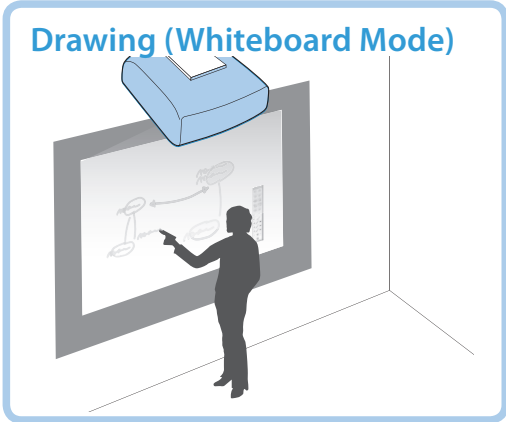


1

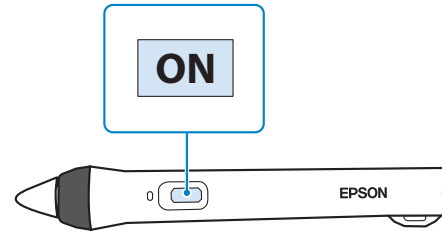 



2

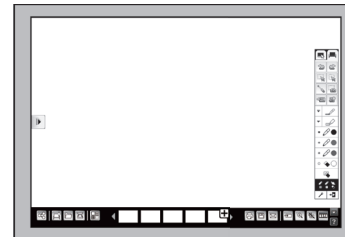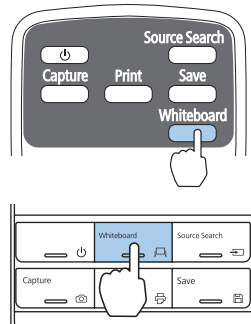  

Drawing (Annotation Mode)


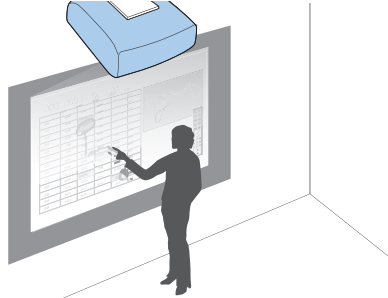 






1

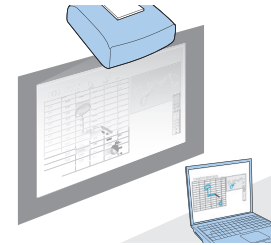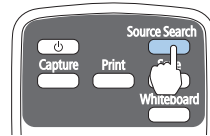  


8

      
2

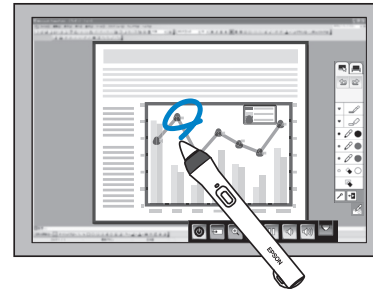
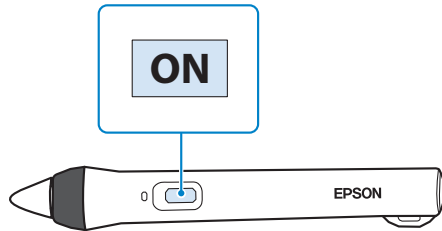


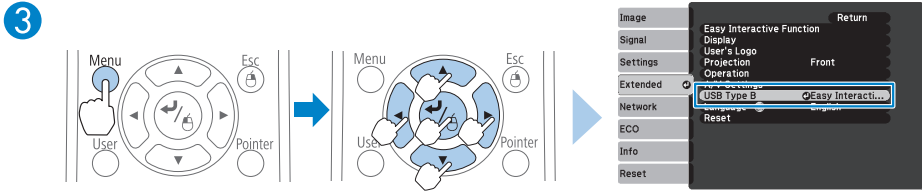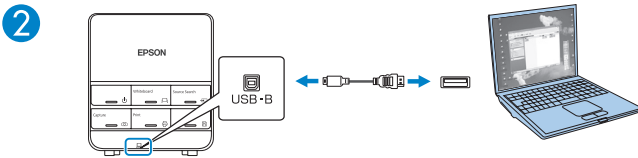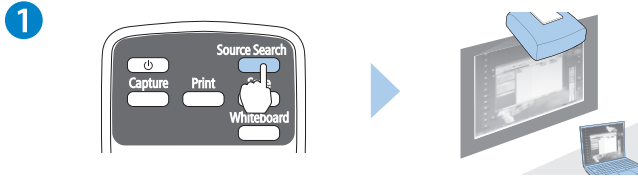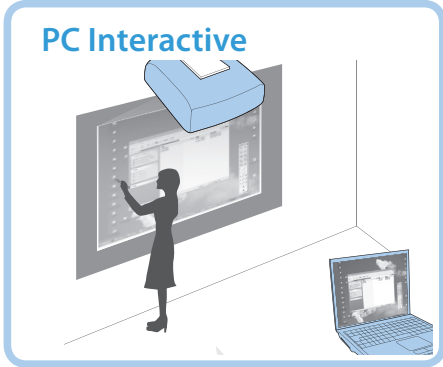

USB Display/
Easy Interactive
Function

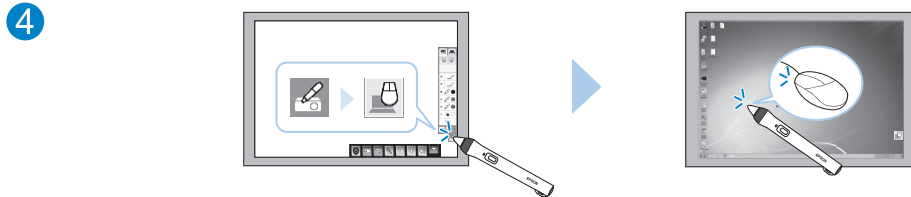 

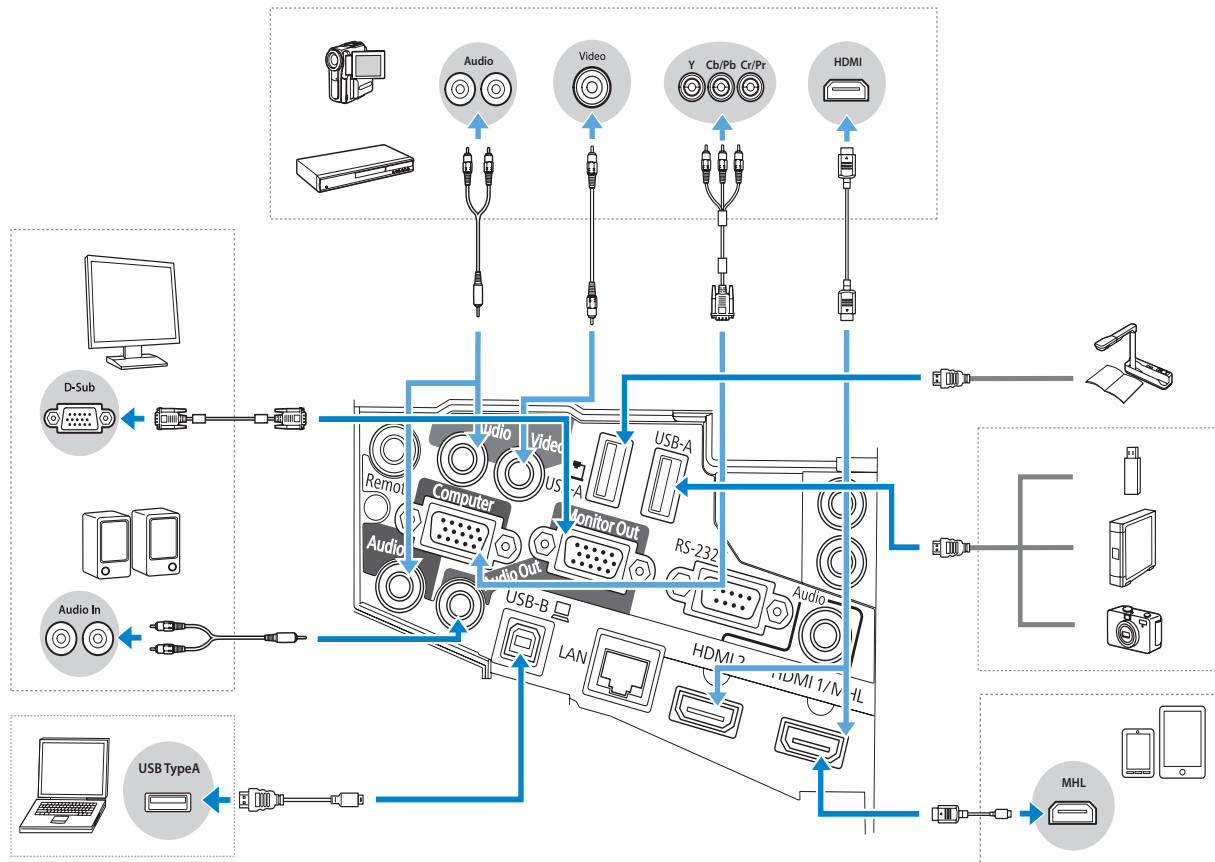 

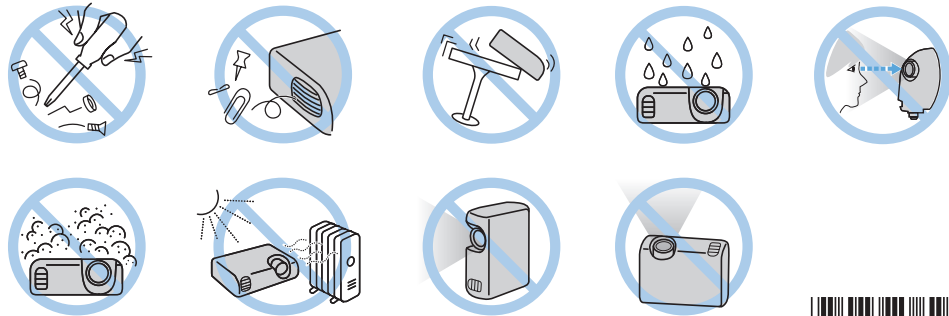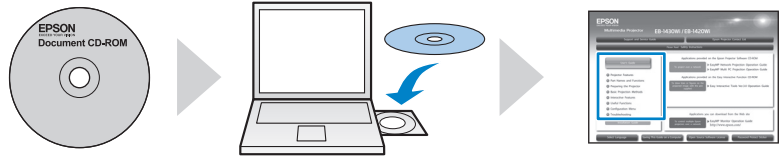  

Printed in EU
XX.XX-XX(XXX)



413069201