



© 2017 Seiko Epson Corporation.  
Printed in XXXXXX

**Read This First**

This printer requires careful handling of ink. Ink may splatter when the ink tanks are filled or refilled with ink. If ink gets on your clothes or belongings, it may not come off.

**Първо прочетете това**

Този продукт изисква внимателно боравене с мастилото. При пълнене или доливане на резервоарите може да се получат пръски от мастило. Ако върху дрехите или вещите ви попадне мастило, е възможно то да не може да бъде отстранено.

**Vispirms izlasiet šo**

Izmantojot šo printeri, nepieciešams uzmanīgi apieties ar tinti. Iepildot vai papildinot tintes tvertnēs tinti, tā var izšļakstīties. Ja tintē nokļūst uz jūsu apģērba vai citiem priekšmetiem, to iespējams, nevarēs notīrīt.

**Pirmausiai perskaitykite tai, kas nurodyta toliau**

Naudojant šį spausdintuvą, su rašalu reikia elgtis atsargiai. Pildant arba pakartotinai papildant rašalo kasetes, rašalas gali iššliskti. Jei rašalo užtško ant drabužių ar kitų daiktų, jis gali neišsilaupiti.

**Lugeje kōigepealt seda**

Selle printeri puhul tuleb tinti kaitlemisel olla hoolikas. Tint võib pritsida, kui tindimahuteid täidetakse või taastäidetakse tindiga. Kui tint läheb teie riieetele või asjadele, ei pruugi see maha tulla.

**Önce Bunu Okuyun**

Bu yazıcıdaki mürekkebin kullanımına dikkat edilmelidir. Mürekkep tankları doldurulurken veya yeniden doldurulurken etrafa mürekkep bulaşabilir. Giysilerinize veya eşyalarınıza mürekkep bulaşursa bu lekelerin temizliği mümkün olmayabilir.



Contents may vary by location.

Съдържанието може да варира според местоположението.

Saturs var būt atšķirīgs atkarībā no valsts.

Turiny gali skirtis, atsižvelgiant į šalį.

Sisu võib sõltuvalt asukohast erineda.

İçerik bölgeye göre farklılık gösterebilir.

**1**

Remove all protective materials. Remove the cap of the ink bottle. Do not connect a USB cable unless instructed to do so. Do not connect a USB cable unless instructed to do so. Do not connect a USB cable unless instructed to do so. Do not connect a USB cable unless instructed to do so.

**2**

Open. Open the cap. Atveriet. Atveriet. Atveriet. Atveriet. Atveriet. Atveriet.

**3**

Remove the cap while keeping the ink bottle upright. Remove the cap while keeping the ink bottle upright. Remove the cap while keeping the ink bottle upright. Remove the cap while keeping the ink bottle upright.

**4**

Position the top of the ink bottle along the slot in front of the filling port, and then stand the bottle slowly to insert it into the filling port. Position the top of the ink bottle along the slot in front of the filling port, and then stand the bottle slowly to insert it into the filling port.

**5**

Push the ink bottle into the filling port. Push the ink bottle into the filling port. Push the ink bottle into the filling port. Push the ink bottle into the filling port.

**6**

Cover the cap. Cover the cap. Cover the cap. Cover the cap. Cover the cap. Cover the cap.

**7**

Close securely. Close securely. Close securely. Close securely. Close securely. Close securely.

**8**

Repeat steps 2 to 7 for each ink bottle. Repeat steps 2 to 7 for each ink bottle. Repeat steps 2 to 7 for each ink bottle. Repeat steps 2 to 7 for each ink bottle.

**9**

Close. Close. Close. Close. Close. Close.

**10**

Connect and plug in. Connect and plug in. Connect and plug in. Connect and plug in. Connect and plug in. Connect and plug in.

**11**

Hold down the power button until the lamp turns on. Hold down the power button until the lamp turns on. Hold down the power button until the lamp turns on. Hold down the power button until the lamp turns on.

**12**

Press the power button for 3 seconds until the lamp starts flashing. Press the power button for 3 seconds until the lamp starts flashing. Press the power button for 3 seconds until the lamp starts flashing. Press the power button for 3 seconds until the lamp starts flashing.

**13**

Charging ink takes about 10 minutes. Charging ink takes about 10 minutes. Charging ink takes about 10 minutes. Charging ink takes about 10 minutes.

**14**

Load paper in the rear paper feed with the printable side facing up. Load paper in the rear paper feed with the printable side facing up. Load paper in the rear paper feed with the printable side facing up. Load paper in the rear paper feed with the printable side facing up.

**15**

Print a nozzle check pattern to adjust the print quality. Print a nozzle check pattern to adjust the print quality. Print a nozzle check pattern to adjust the print quality. Print a nozzle check pattern to adjust the print quality.

**16**

Run print head cleaning until all lines are printed completely. Run print head cleaning until all lines are printed completely. Run print head cleaning until all lines are printed completely. Run print head cleaning until all lines are printed completely.

**Cleaning uses some ink from all tanks, so only run cleaning if print quality declines.**

Run print head cleaning until all lines are printed completely. Run print head cleaning until all lines are printed completely. Run print head cleaning until all lines are printed completely. Run print head cleaning until all lines are printed completely.

**2 Windows**

Insert the CD, and then select A or B. Insert the CD, and then select A or B. Insert the CD, and then select A or B. Insert the CD, and then select A or B.

**No CD/DVD drive Mac**

Visit the website to start the setup process, install software, and configure network settings. Visit the website to start the setup process, install software, and configure network settings.

**iOS/Android**

Visit the website to start the setup process, install software, and configure network settings. Visit the website to start the setup process, install software, and configure network settings.

