


EN Start Here NL Hier beginnen
FR Démarrer ici IT Inizia qui
DE Hier starten ES Para empezar



© 2021 Seiko Epson Corporation

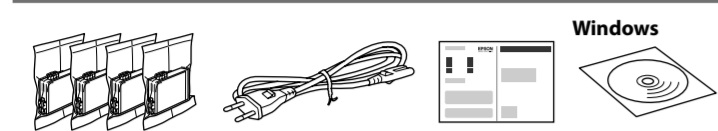

Contents may vary by location. Le contenu peut varier en fonction du pays où vous vous trouvez.

Do not open the ink cartridge package until you are ready to install it in the printer.

Öffnen Sie die Verpackung der Tintenpatrone erst unmittelbar vor dem Einsetzen der Patrone in den Drucker.

Non aprire la confezione della cartuccia di inchiostro finché non si è pronti per installarla nella stampante.

No abra el envoltorio del cartucho de tinta hasta el momento de instalarlo en la impresora.

Do not connect a USB cable unless instructed to do so.

Non collegare il cavo USB finché non viene richiesto.

1. Setting up the Printer

Remove all protective materials. Retirez tous les emballages de protection.

If you do not need to make fax settings, go to step 14.

Load paper in the paper cassette with the printable side facing down.

Chargé le papier dans la cassette papier face imprimable vers le bas.

Set the paper size and paper type for the paper cassette.

Make the fax settings. You can change these settings later.

Sie können diese Einstellungen später ändern.

Stel het papierformaat en papiertype in voor de papiercassette.

Impostare il formato e il tipo di carta per il relativo cassetto.

You can open the PDF manuals from the shortcut icon.

Sie können die PDF-Handbücher über das Verknüpfungssymbol öffnen.

Connecting to PSTN or PBX, Connecting to DSL or ISDN. Available phone cable options for different connection types.

Depending on the area, a phone cable may be included with the printer.

If you want to share the same phone line as your telephone, remove the cap and then connect the telephone to the EXT. port.

Connect and plug in. Connexion et branchement. Anschließen und einstecken.

Hold down the power button until the lamp turns on. Appuyez sur le bouton d'alimentation jusqu'à ce que la lampe s'allume.

Language selection screen. Select a language, country and time. Choisissez une langue, un pays et l'heure.

Gently shake the black ink cartridge four or five times, and then remove it from its package.

Do not touch the sections shown in the illustration of the cartridge.

Remove only the yellow tape. Retirez uniquement la bande jaune.

For the initial setup, make sure you use the ink cartridges that came with this printer.

2. Installing Software

Windows: Insert the CD, and then select A or B. Insérez le CD, puis sélectionnez A ou B.

If the Firewall alert appears, allow access for Epson applications.

No CD/DVD drive Mac OS: Visit the website to start the setup process, install software, and configure network settings.

iOS/Android: Visit the website to start the setup process, install software, and configure network settings.

Epson Connect: Visit the website to start the setup process, install software, and configure network settings.

Questions? You can open the PDF manuals from the shortcut icon.

You can open the PDF manuals from the shortcut icon.

È possibile aprire i manuali in PDF dall'icona di collegamento o scaricare le versioni più recenti dal seguente sito web.

http://www.epson.eu/support (Europe)
http://support.epson.net/ (outside Europe)

Copying

Open. Ouvrez. Öffnen. Open. Aprire. Abra.

Place the original, and then close the cover.

Make other settings as necessary. Procédez de d'autres réglages si nécessaire.

Tap to start copying. Appuyez sur pour démarrer la copie.

Print Quality Help

If you see missing segments or broken lines in your printouts, print a nozzle check pattern to check if the print head nozzles are clogged.

Cuando la instale por primera vez, asegúrese de que utiliza los cartuchos de tinta que se incluyen con esta impresora.

Insert all four cartridges. Press each unit until it clicks.

Close. Refermez. Schließen. Sluiten. Chiudere. Cierre.

Follow the instructions on the LCD screen. Wait until ink charging is complete.

When ink charging is complete, the print quality adjustment screen is displayed.

Une fois le chargement d'encre terminé, l'écran d'ajustement de la qualité d'impression s'affiche.

Should the Ausdruck fehlende Segmente oder unterbrochene Linien aufweisen, drücken Sie ein Düsenentmuster, um zu prüfen, ob die Druckkopfdrüsen verstopft sind.

Ink Cartridge Codes

Table with columns BK, C, M, Y and rows for various ink types like Black, Cyan, Magenta, Yellow.

“XL” indicates large cartridge. « XL » indique une cartouche grand format.

Notice on Printer Information Transmission (only for Users in Europe)

Notice on transmission of information relative to the printer (only for users in Europe)

Notice on the transmission of information of the printer (solo para usuarios en Europa)

Notice on the transmission of information of the printer (solo para usuarios en Europa)



