EPSON®

EPSON AcuLaser™ COLOR COPY STATION 8500

Quick Reference

Control Panel Functions

Memory button
Selects, saves, or deletes user-defined copy job memories.

Reset button
Sets all copy job settings to default values.

Numeric key pad
Used to enter the number of copies, the zoom ratio, and other values.

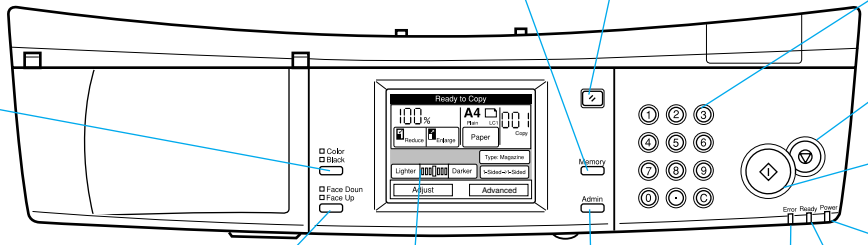

Color/Black button
Switches between color and monochrome modes.

Stop button
Stops copying.

Start button
Starts copying.

Power light
On when the printer is on.

face-down tray

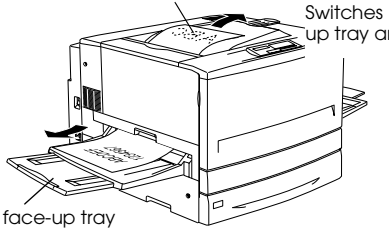

face-up tray

Face Down/Face Up button
Switches between the face-up tray and face-down tray.

Admin button
Displays the administrator's mode selection screen. Available settings:

- Key Tone
- Standby Control
- Auto Feed
- Set Default Copy Job
- Color Calibration
- Select Language
- Restore Default

Ready light
On when ready to copy.

Touch screen
Sets various copy functions.

Error light
On when an error occurs. (See "Error Messages" on page 4.)

Copyright© 2000 by SEIKO EPSON CORPORATION, Nagano, Japan

4012842-00
XXX

Touch Panel Functions

The following screen appears when the copy station is ready for copying.

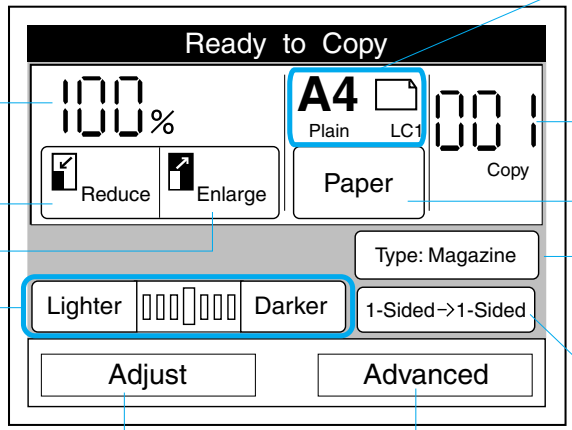

Shows the current paper size, document orientation, and paper type.

Sets the zoom ratio and displays the current zoom ratio.

Shows the number of copies.

Reduces the copy size.

Selects a paper source, size, and document orientation.

Enlarges the copy size.

Selects a document type. Available settings:

- Photo
- Text
- Magazine
- Map
- Detail

Adjusts brightness.

Selects 1-sided/2-sided printing modes.

Displays the color adjustment mode selection screen. Available settings:

- Contrast
- RGB Adjust
- Saturation
- Hue

Displays the advanced copy mode selection screen. Available settings:

- Join Pages
- Margin
- Split Pages
- Remove Shadows
- Collate

Document and Paper Source Orientation

Place your document on the scanning table with the side to be scanned facing down.

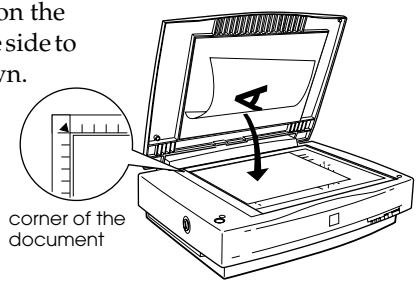

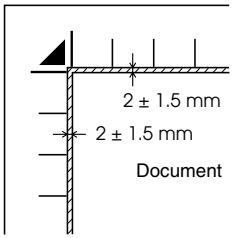

An area 2 ± 1.5 mm in from both horizontal and vertical rulers will not be scanned.

When copying A4, Letter, Executive, or B5 size documents, select the paper source setting that matches the orientation of the document on the document table. See the figure below.

When placing a document horizontally

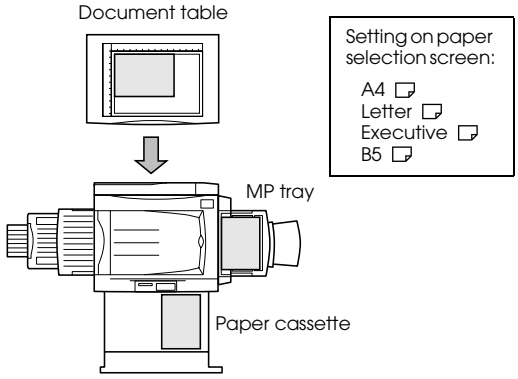

When placing a document vertically

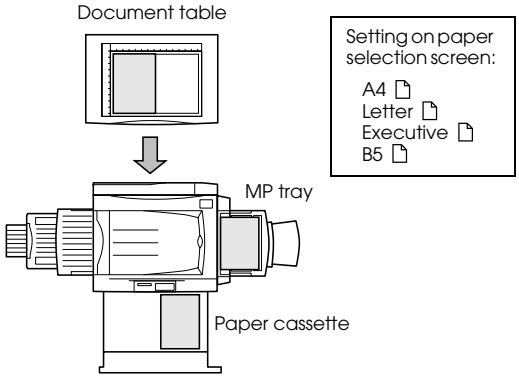

Error Messages

The following error messages will appear on the touch screen when an error has occurred in the copy station.

Copy system errors

Display on the control panel	Details and Solution
System Error Internal Error Restart System	Restart System. (1) Turn off the scanner and the printer. (2) Wait for approximately three minutes, and then turn the devices back on. (3) If the same message reappears, this may indicate malfunctioning interface boards. In this case, contact your dealer or the closest customer support services for assistance.
System Error Fatal Error Restart System	
System Error Paper Error Press the Stop button	A document that cannot be scanned is placed on the scanner. Press the ⓥ stop button, and check the document type.
System Error HDD Full Press the Stop button	In the Collate mode, scanning cannot be completed because the optional Hard Disk Unit is full. Press the ⓥ stop button to cancel the copy job.

Printer errors

Printer error messages are displayed on both the copy station's touch screen and on the printer's LCD panel. When an error occurs, see the section about error messages in the *EPSON AcuLaser Color Copy Station 8500 Reference Guide* or in the printer's *Quick Reference* guide, then try the solutions provided.

Scanner and calibration errors

For scanner or calibration errors, see the section about error messages in the *EPSON AcuLaser Color Copy Station 8500 Reference Guide*.