

# EPSON

## **Collaborative Robot: 6-Axis Robots AX6 Manual**

Original Instructions

©Seiko Epson Corporation 2026

Rev. 1.0  
ENM265R8042M

## Table of Contents

Introduction.....	5
System Overview.....	6
1. Safety.....	7
1.1 Conventions.....	8
1.2 Intended Use.....	9
1.3 Installation and Operation Safety.....	10
1.4 Power Failure.....	12
1.5 Movement Without Drive Power.....	12
1.6 Labels.....	13
2. Specification.....	14
2.1 Model Number.....	15
2.2 Overview and Part Names.....	15
2.3 Dimensions and Workspace.....	16
2.4 Technical Data.....	17
2.5 Maximum Performance Limits.....	18
2.5.1 Payload Limitations.....	18
2.5.2 Thermal Limitations.....	20
2.6 Stopping Time and Stopping Distance.....	20
2.7 Manipulator Lifetime.....	22
2.8 Material List.....	22
2.9 Emissions.....	22
2.9.1 Noise.....	22
2.9.2 Clean Room.....	22
3. Installation.....	23
3.1 Environment.....	24
3.2 Unpacking, Packing and Transporting.....	24
3.2.1 Packing Pose.....	26
3.3 Mounting Orientation.....	26
3.4 Installation.....	27
3.4.1 Mounting Area.....	28
3.4.2 Mounting the Manipulator.....	28
3.4.3 Mounting Surface Requirements.....	30
3.4.4 Connecting the Cables.....	31
3.5 Status Indicators.....	32
3.5.1 LED Status Ring.....	32
3.6 Control Buttons.....	33
4. End-Effector Interfaces.....	34
4.1 Introduction.....	35
4.2 Weight and Inertia Settings.....	35

---

4.3 Mechanical End-Effector Interface.....	35
4.4 Connector Protectors.....	36
4.5 Air Connectors.....	37
4.6 Electrical Interface to End-Effector (Tool I/O).....	38
4.6.1 Introduction.....	38
4.6.2 Tool Connector Type and Pin Assignment.....	39
4.6.3 I/O Configuration.....	39
4.6.4 Digital Inputs (Tool I/O).....	40
4.6.5 Digital Outputs (Tool I/O).....	42
4.6.6 Analog Inputs (Tool I/O).....	44
4.6.7 Analog Outputs (Tool I/O).....	45
4.7 Ethernet Line.....	46
5. Maintenance.....	47
5.1 Introduction.....	48
5.2 Cleaning of the Manipulator and Controller.....	48
5.3 Maintenance Inspection.....	49
5.4 Repair.....	50

## Terms of Use

No part of this instruction manual may be reproduced or reprinted in any form without express written permission.

The information in this document is subject to change without notice.

Please contact us if you find any errors in this document or if you have any questions about the information in this document.

## Safety Manual

The following information is provided in the Safety Manual:

- Manufacturer
- Importer
- Contact Information
- Disposal

For details, refer to the “AX6 / RC-A101 Safety Manual.”

## Introduction

Thank you for purchasing this Epson robot system. This manual provides the information necessary for correctly using the robot system.

Before using the system, please read this manual and related manuals (see “AX6 / RC-A101 Safety Manual”) to ensure correct use.

After reading this manual, store it in an easily accessible location for future reference.

Epson conducts rigorous testing and inspection to ensure that the performance of their robot systems meets their standards. Please note that if the Epson robot system is used outside the operating conditions described in the manual, the product will not perform up to its basic performance.


This manual describes potential hazards and problems that are foreseen. To use the Epson robot system safely and correctly, be sure to follow the safety information contained in this manual.

## System Overview

AX6 is the name of the six degrees of freedom light-weight robotic manipulator. AX6 is born to work with humans. As the latest generation of personal, innovative and versatile robots, AX6 is perfectly suited to take over complex automation tasks, carry out precise laboratory processes or serve universities as research robots.

The powerful and versatile, web-based AX Portal software opens up unprecedented possibilities. From intuitive graphical programming to sophisticated Python code – AX Portal offers every programmer easy access. Thanks to the many interfaces, AX6 can be easily integrated into existing systems. Peripheral devices such as grippers, cameras or external axes can be seamlessly integrated. Many industrial buses as well as ROS are supported. External, safe control panels ensure a high level of operating convenience for the operator.

For the operation of the AX6 manipulator, the controller RC-A101 is required (delivered with AX6).

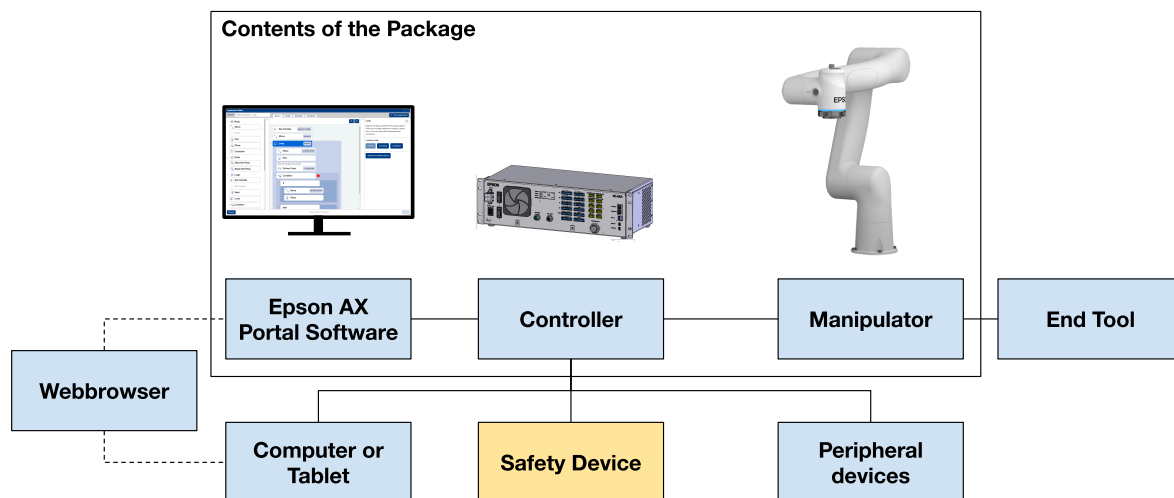





System overview.

# **1. Safety**

## 1.1 Conventions


The table below explains the symbols used in this document and on the product itself.

 <b>WARNING</b>	This symbol indicates that a danger of possible serious injury or death exists if the associated instructions are not followed.
 <b>WARNING</b>	This symbol indicates that a danger of possible harm to people or death caused by electric shock exists if the associated instructions are not followed properly.
 <b>CAUTION</b>	This symbol indicates that a danger of possible harm to people or physical damage to equipment and facilities exists if the associated instructions are not followed properly.
	This symbol indicates that safety goggles must be worn.



## 1.2 Intended Use


AX6 is normally integrated into a production line and it usually works with grippers or other end effectors. Before AX6 is used for the first time, a risk assessment must be carried out for the final system into which AX6 is to be integrated. This risk assessment must conform to the country-specific safety standards and directives. In the case of collaborative applications, special attention must be paid for avoiding hazards to humans in the risk assessment. AX6 may be used across different industries for stationary or mobile applications. Its main purpose is handling or assembling parts, executing automated processes with end effectors, tools or fixtures and direct interaction with people when the safety functions for collaborative operation are enabled.



 <b>WARNING</b>	<p>Any use that does not fall within the intended use is considered misuse and is not permitted.</p> <p>Some examples of misuse (the list is not exhaustive):</p> <ul style="list-style-type: none"><li>• Any application that causes harm to humans or animals.</li><li>• Any application that could endanger human or animal life or cause injury in the event of a malfunction.</li><li>• Handling or use of hazardous objects or substances in collaborative applications.</li><li>• Exceeding the specified operating limits or operating the robot not within the allowed environmental conditions.</li><li>• Lifting any humans or animals.</li><li>• Use in explosive environments.</li></ul>
---	---

## 1.3 Installation and Operation Safety

The design and installation of this robot system must be carried out by personnel who have been trained in robotic systems by us or our suppliers. Users must undergo system-specific training and be informed about all safety aspects.

This robot comes with integrated safety functions which allow collaborative applications. To declare an application as collaborative, it must be proven in the mandatory risk analysis that the robot is not hazardous. Otherwise the working area of the robot must be safeguarded. For detailed information about robot safety, see “AX6 / RC-A101 Safety Manual”.

 <b>WARNING</b>	<p>Pay attention to the following safety instructions:</p> <ul style="list-style-type: none"><li>• Please read this manual, the “Robot Controller RC-A101 Manual” and the “AX6 / RC-A101 Safety Manual” before using this robot system. Operating the robot system without understanding the safety precautions is extremely hazardous and may result in serious bodily injury and/or severe equipment damage to the robot system.</li><li>• The robot system must be used in accordance with the environmental conditions described in the relevant manual. Using the product in an environment that exceeds these conditions can shorten its service life and cause serious safety problems.</li><li>• Collaborative applications: Although the collision detection reduces the hazard of collisions with the human body to a minimum, the risk of collisions with head and neck must be prevented.</li><li>• Non-collaborative applications: Do not enter the operating area of the manipulator while the robot is powered-up and make sure that no one is inside this area before powering up. Being within the operating area of a powered-up manipulator is extremely hazardous and may cause serious safety problems as the manipulator may move even if it seems to be stopped.</li><li>• Immediately press the emergency stop button whenever the manipulator moves abnormally during operation. Continuing the operation while the manipulator moves abnormally is extremely hazardous and may result in serious bodily injury and/or severe equipment damage to the robot system.</li><li>• Only use original parts purchased from us or our partners for the repair and wiring of this robot system. The use of third-party components can lead to electric shock, serious injury, malfunction and/or damage to the robot system.</li></ul>
---	---

 <b>WARNING</b>	<p>Pay attention to the following safety instructions regarding electricity:</p> <ul style="list-style-type: none"><li>• Before performing any replacement procedure, turn the controller and related equipment off, and then disconnect the power plug from the power source. Performing any replacement procedure with the power on is extremely hazardous and may result in electric shock and/or malfunction of the robot system.</li></ul>
 <b>CAUTION</b>	<p>In addition to the safety instructions, note the following:</p> <ul style="list-style-type: none"><li>• Whenever possible, only one person should operate the robot system. If it is necessary to operate with more than one person, ensure that all personnel communicate with each other and take all necessary safety precautions.</li><li>• If the joints are operated repeatedly with the operating angle less than 5 degrees, they may get damaged early because the bearings are likely to cause oil film shortage in such a situation. To prevent early breakdown, move each joint larger than 30 degrees for about once an hour.</li><li>• When the manipulator moves, continuous vibrations (resonance) may occur depending on the combination of manipulator orientation and end effector load. These vibrations are caused by the natural frequency of the manipulator and can be controlled by the following measures:<ul style="list-style-type: none"><li>○ Changing the manipulator speed</li><li>○ Changing the position</li><li>○ Changing the end effector mass</li></ul></li></ul>

## 1.4 Power Failure

Do not turn off the controller while the manipulator is operating. The lifetime of the gears may be reduced and there may be wear on the brakes.

If the control unit was switched off due to a power failure while the manipulator was in operation, you should check the following points once the power supply has been restored:

- If a reduction gear is damaged.
- Proper functioning of the brakes in all 6 joints

## 1.5 Movement Without Drive Power

There are two ways to move the manipulator away if not powered. Please check always if it is feasible to move the robot in release mode before you try one of the following methods.

### 1) Pull or Push on the Robot Links

If the power supply is disconnected or the emergency stop is pressed, the brakes in each joint hold the robot in its position. In these cases, the joints can be moved by hand by pulling or pushing on the robot links with sufficient force. The table below shows the estimated brake torque, but please note that the torque can deviate from the specified values by up to 50 %.

Joint	AX6
1	200 Nm
2	
3	
4	30 Nm
5	
6	

Note that this can shift the TCP slightly. If you realise a TCP shift, perform calibration by referring to the “Robot Manipulator AX6 Service Manual”.

This may be necessary in the case of an emergency, e.g. if a person is trapped. Only move the joints manually if no other option is available.

### 2) Unscrew the Manipulator

In some cases, it might be easier to unscrew the manipulator instead of moving the joints by hand. It is therefore also important that the screws that fix the manipulator are always accessible (i.e. not covered).


## 1.6 Labels

Be sure to comply with information and warnings on the labels to operate and maintain the manipulator safely. Do not tear, damage, or remove the labels.

For details consult the “AX6 / RC-A101 Safety Manual”.


## **2. Specification**

## 2.1 Model Number

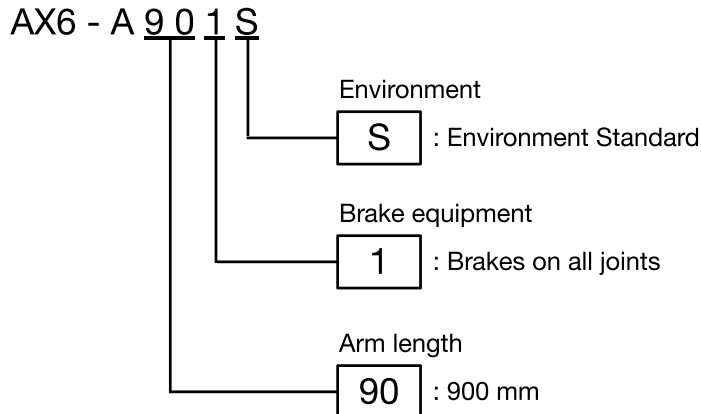

## 2.2 Overview and Part Names

AX6 is a robotic manipulator with six degrees of freedom. The manipulator structure is made of rigid and lightweight carbon-fibre-reinforced polymers and aluminium. The image below shows an overview of the robot's structure.

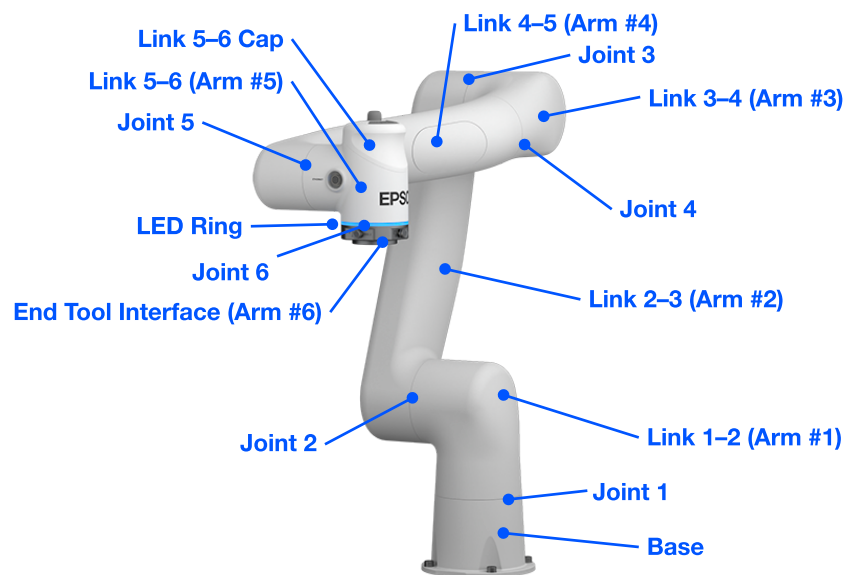


AX6 overview.

The robot can be fixed rigidly to a solid surface with four screws, while positioning pins or precise positioning surfaces on the base ensure exact alignment.

Each joint is driven by a brushless motor with safe absolute encoders. Strain wave gearboxes ensure maximum transmission accuracy. State-of-the-art drive technology ensures smooth and safe operation.

## 2.3 Dimensions and Workspace

The drawing below shows the working space of AX6. Note that not every position within the workspace will be accessible with every possible orientation of the end-effector.

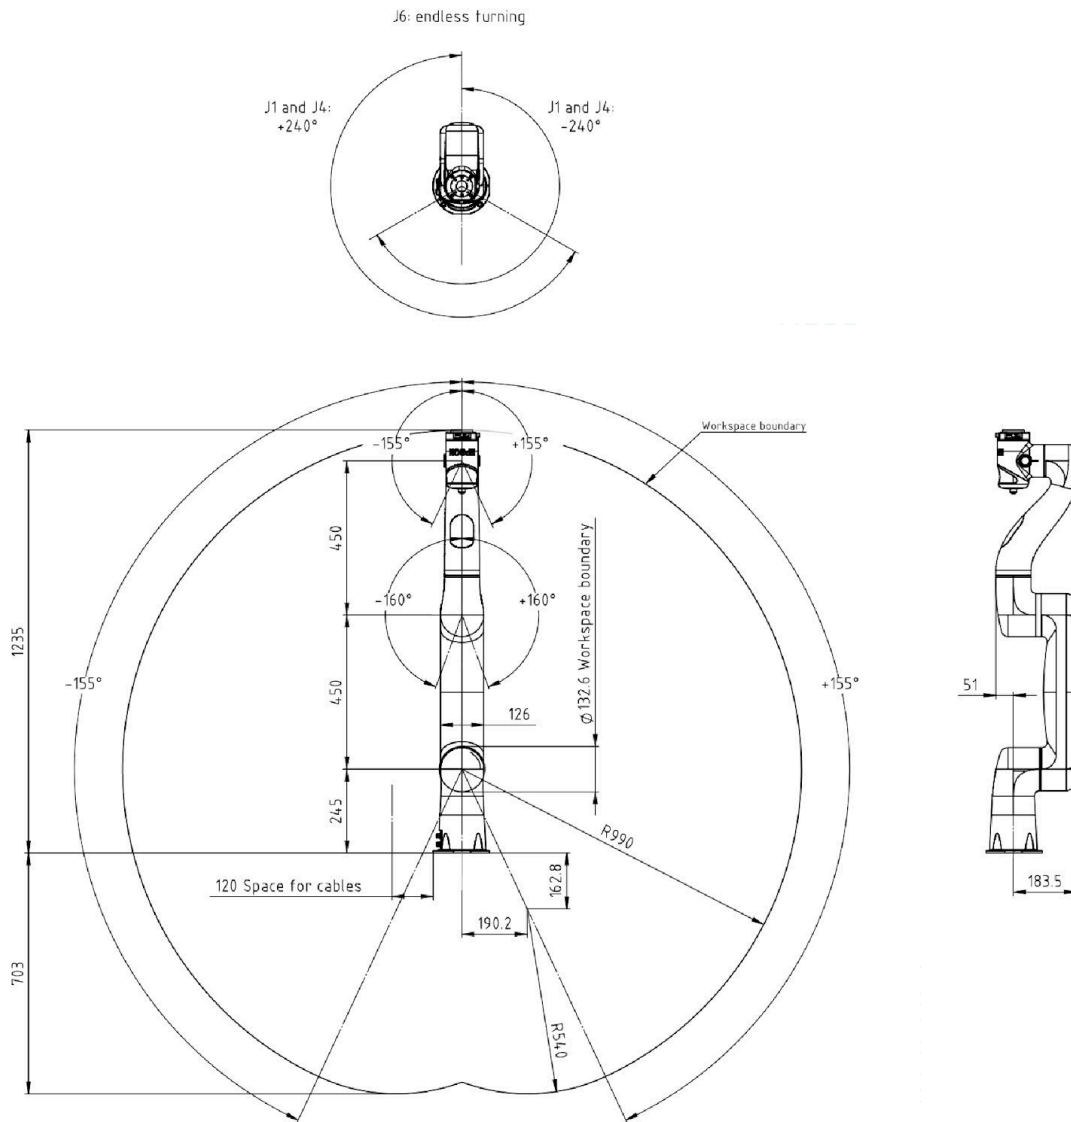

Working range of AX6.



## 2.4 Technical Data

The table below shows technical data of the manipulator.

<b>Model</b>		<b>AX6</b>
<b>Reach (J1 center to J5 center)</b>		900 mm
<b>Manipulator Weight (without cables)</b>		18 kg
<b>Maximum Payload</b>		6 kg
<b>Maximum Operation Speed</b>	Joint 1	180 °/s
	Joint 2	180 °/s
	Joint 3	180 °/s
	Joint 4	240 °/s
	Joint 5	240 °/s
	Joint 6	240 °/s
<b>Maximum Operation Acceleration</b>	Joint 1	500 °/s <sup>2</sup>
	Joint 2	500 °/s <sup>2</sup>
	Joint 3	500 °/s <sup>2</sup>
	Joint 4	1000 °/s <sup>2</sup>
	Joint 5	1000 °/s <sup>2</sup>
	Joint 6	1000 °/s <sup>2</sup>
<b>Maximum Motion Range</b>	Joint 1	±240°
	Joint 2	±155°
	Joint 3	±160°
	Joint 4	±240°
	Joint 5	±155°
	Joint 6	No limit <sup>1</sup>
<b>Maximum Cartesian Speed at TCP</b>		2000 mm/s
<b>Allowable Moment</b>	Joint 4	24 Nm
	Joint 5	24 Nm
	Joint 6	24 Nm


<sup>1</sup> There is a multiturn counter limit at ±50 full rotations of joint 6. Motions beyond this limit are not possible. When using an Ethernet cable and/or air tubes connected to an end-effector, they limit the movement of joint 6.


<b>Allowable Moment of Inertia (<math>GD^2/4</math>)</b>	Joint 4	0.6 Nm
	Joint 5	0.6 Nm
	Joint 6	0.6 Nm
<b>Repeatability</b>		±0.03 mm
<b>M/C Cable</b>	Power cable	0.5 m, 1.5 m, 3 m, 5 m
	Signal cable	0.5 m, 1.5 m, 3 m, 5 m

## 2.5 Maximum Performance Limits

### 2.5.1 Payload Limitations



The maximum possible joint acceleration depends on the payload (tool mass and object mass), as visualised in the graph below. To set the correct payload, please refer to the “AX Portal User’s Guide”.

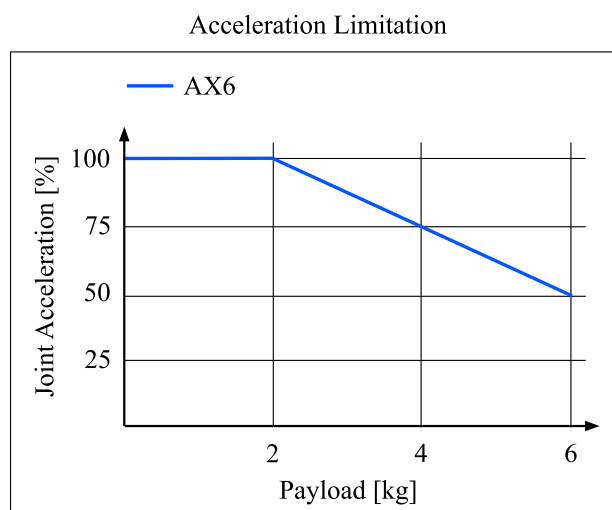

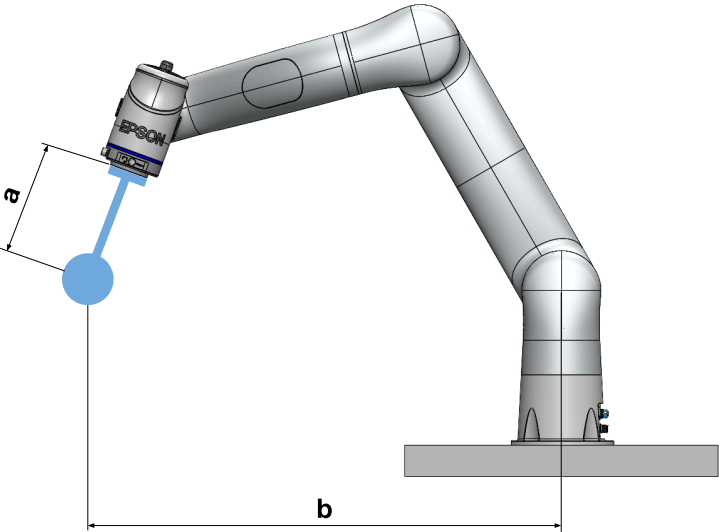


Distances to Payload.

If the center of gravity of the payload is far away from the end tool interface (Tool Distance a in the image) or the robot base (Base Distance b), further limitations may apply as shown in the graphs below.

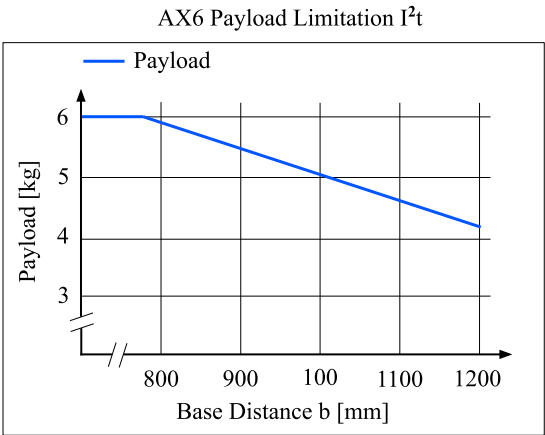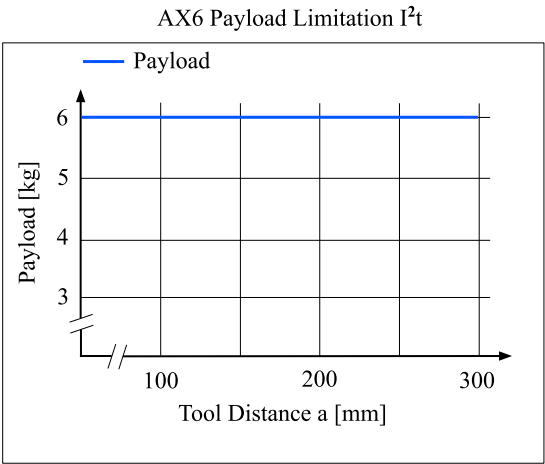

## 2.5.2 Thermal Limitations

Please note that thermal limitations apply. While a demanding motion can be easily done for a certain time, it might overheat the drives when done repeatedly without interruption. A thermal protection protects the robot from damage by limiting the maximum speed of the robot when the joint temperature reaches 70 °C. If the temperature rises to 90 °C, the robot stops, see graph below. It is possible to deactivate the speed limitation from 70 °C. Please note that in this case the critical 90 °C, where the robot stops in any case, can be reached more quickly. See “AX Portal User’s Guide”.

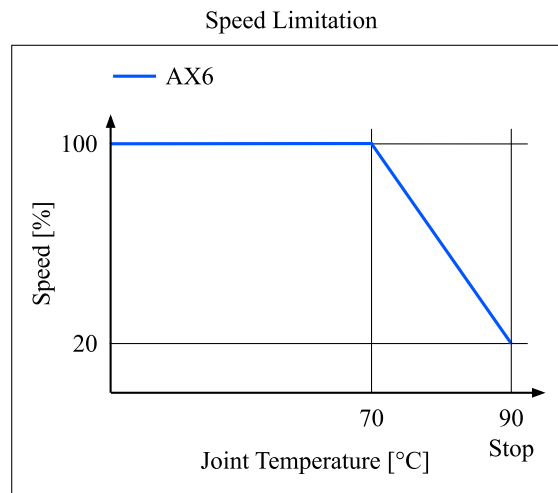

It is recommended to monitor the joint temperature in the AX Portal when the robot is used in applications with high speed or payload. A reduction in the temperature can be achieved by reducing the application speed, the payload or by optimising the paths.

In addition to the joint temperature sensor, a protection function is provided to prevent overheating caused by high continuous currents. This may happen if the maximum payload of the robot is exceeded or a continuous external force is applied.

## 2.6 Stopping Time and Stopping Distance


The graphs below show the stopping time and the stopping distance as a function of the joint speed. The graphs apply to stops of the stop categories 1 and 2 according to IEC 60204-1 and were recorded for joint 1, 2 and 3.

The joints were tested under the following conditions:


- Joint 1: moving horizontally, TCP 900 mm away from joint 1
- Joint 2: moving downwards, TCP 900 mm away from joint 2
- Joint 3: moving downwards, TCP 450 mm away from joint 3

Note that joint 1 and joint 2 do not reach 100 % speed (180 °/s) when the TCP is 900 mm away from the joints due to the cartesian speed limit. This is why bigger values were measured for joint 3. If the distance between the joint and the TCP is set so that the limit does not apply, joints 1 and 2 behave in the same way as joint 3.


AX6: Joint 1 (table mounting, ceiling mounting)

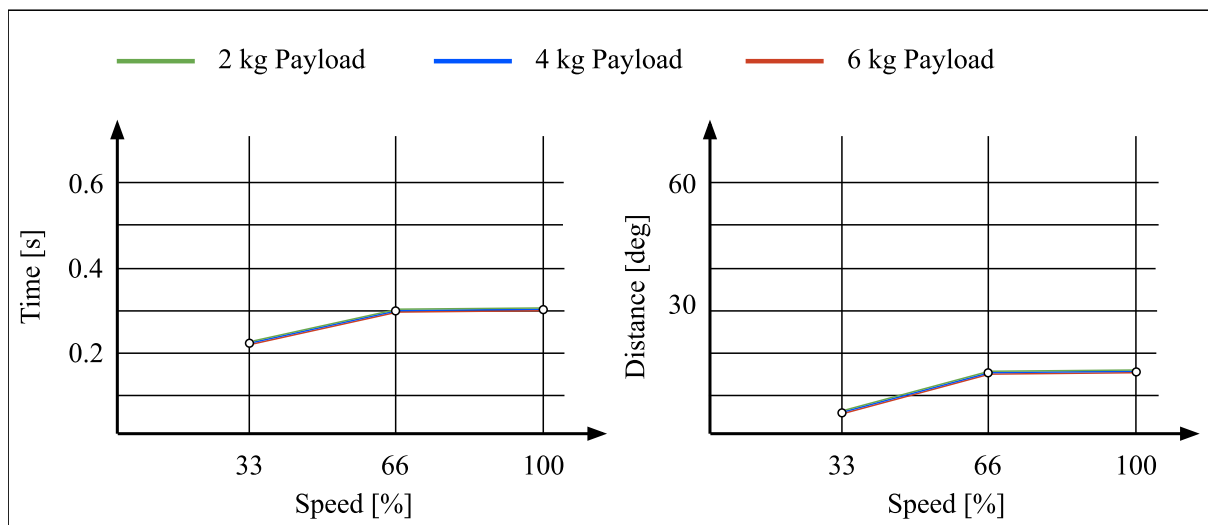

AX6: Joint 2 (table mounting, ceiling mounting)

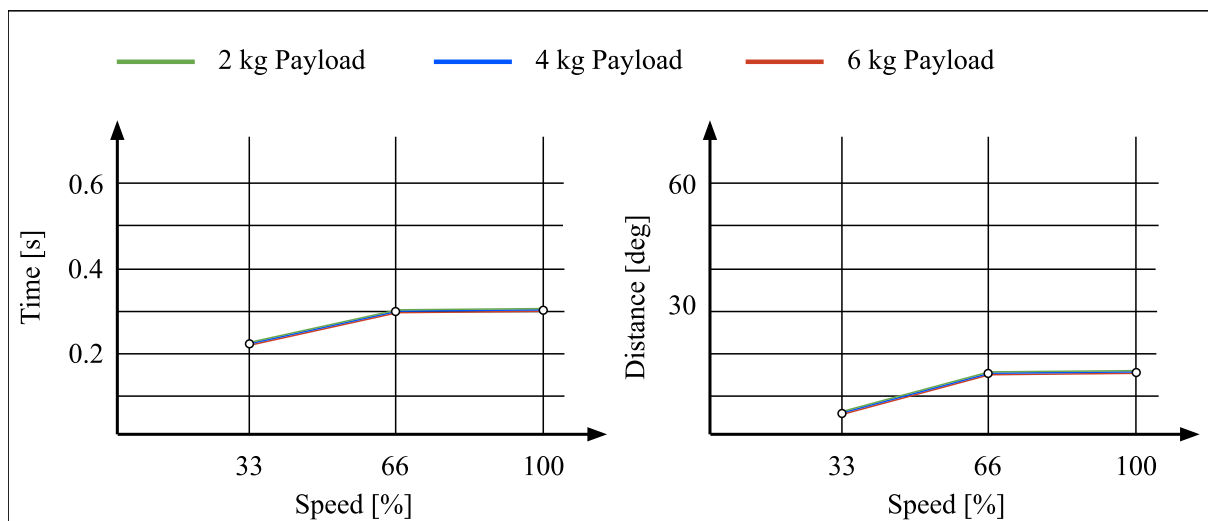

AX6: Joint 3 (table mounting, ceiling mounting)

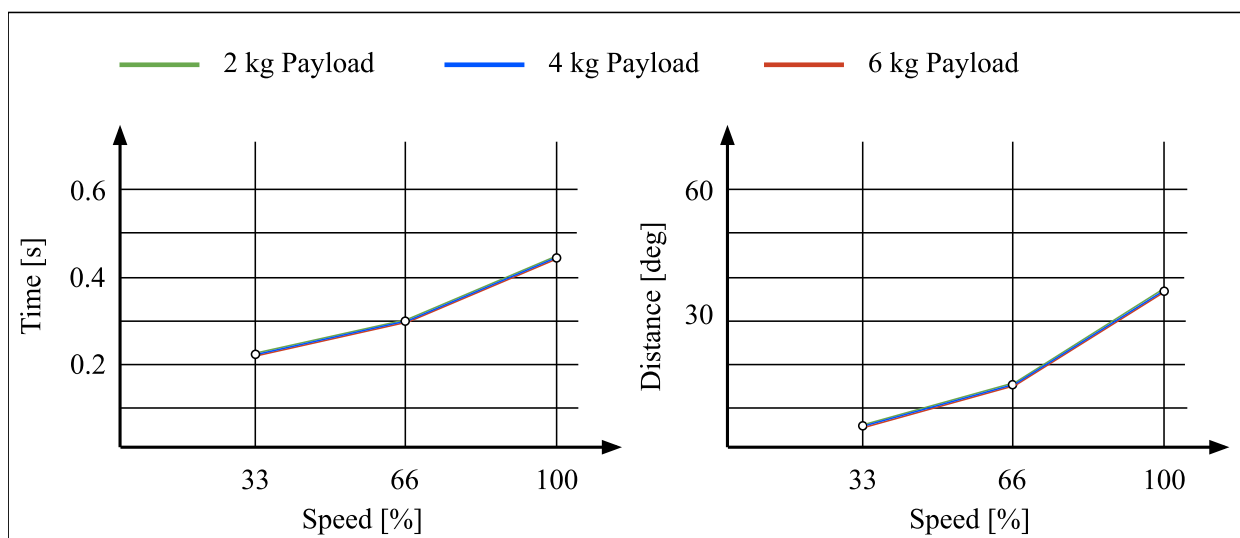

## 2.7 Manipulator Lifetime

Usually, the lifetime of the manipulator is limited by the lifetime of the gears. The joint with the highest load is usually joint 2 (or joint 1 for wall mounting) but it depends on the application. The lifetime of the gearbox depends heavily on the torques acting in the joints, i.e. on the load, the temperature, the speed profile and the programmed positions. To keep the service life of the robot as long as possible, it is recommended to review the application for unnecessarily high acceleration and deceleration values and keep the joint temperatures low. Furthermore, regular maintenance checks help to ensure that the manipulator has the longest possible service life, see [Maintenance Inspection](#).

For typical applications, it is recommended that you consider replacing parts (e.g. joints) after approximately 20,000 hours. At this point, heavily loaded manipulator joints may lead to a loss of accuracy or malfunctions due to signs of wear caused by the manipulator's long-term operation. As mentioned above, the extent to which each joint is loaded depends heavily on the application, which is why the 20,000 hours mentioned is a reference value that may be reached sooner under heavy loads, but is very often exceeded.

## 2.8 Material List

The list below shows the mainly used materials used for the manipulator's outer shell:

- Painted aluminium: Base, link 1–2, link 3–4, link 5–6
- Aluminium: Base, link 5–6 (usually concealed by the air and Ethernet connector covers)
- Painted carbon fibre reinforced polymers: Link 2–3, link 4–5
- Painted polyamide (PA): Covers on link 2–3 and link 4–5
- Anodised aluminium: End tool interface, sheet on the bottom of the base, air fittings
- Stainless steel: Sheet where the connectors are attached, washers in the base
- Thermoplastic elastomers (TPE): Rubber covers and buttons on link 5–6
- NBR/PVC polyblend: Button on link 5–6
- Polycarbonate (PC): LED ring
- Nickel-plated metal: Connectors
- Galvanised and stainless screws

## 2.9 Emissions

### 2.9.1 Noise

Typically, the noise emission of the manipulator is below 70 dB, measured at a distance of 1 m away from the manipulator.

### 2.9.2 Clean Room

The manipulator conforms to cleanroom specification ISO 14644-1 Class 5.

## **3. Installation**

## 3.1 Environment

A suitable environment is necessary for the robot system to function properly and safely. Be sure to install the robot system in an environment that meets the following conditions:

Environment	Condition
Ambient temperature <sup>2</sup>	Transport/Storage: –20 to 60 °C Operation: 5 to 40 °C
Ambient relative humidity	Transport/Storage: 10 to 90 % (no condensation) Operation: 10 to 80 % (no condensation)
Fast transient burst noise	1 kV or less
Electrostatic discharge	4 kV or less
Altitude	Max. 2000 m
Ingress protection code	IP 54 <sup>3</sup>

Please make sure:

- Install indoors.
- Keep away from dust, oily smoke, salinity, metal powder or other contaminants.
- Keep away from flammable or corrosive solvents and gases.
- Keep away from water (see ingress protection code in the table above).
- Keep away from shocks or vibrations.
- Keep away from sources of electric noise above specifications.
- Keep away from explosive areas.
- Keep away from a large quantity of radiation.

Rapid changes in temperature and humidity can lead to condensation inside the manipulator which can lead to damage or degradation. Avoid bringing a cold robot into a warm area to prevent condensation and never power up a robot when it is wet.

## 3.2 Unpacking, Packing and Transporting



Unpacking, packing and transporting must be carried out by personnel who have attended our training sessions on robot systems or those of our suppliers. All national and local codes must be adhered to. It is recommended that the robot always be transported in its original packaging.

---

<sup>2</sup> Please note that the collision detection for power and force limiting may detect false positive collisions when the robot is used close to the minimum specified temperature. In such a case, it is recommended to warm up the robot prior to collaborative operation.

<sup>3</sup> The IP 54 dustproof and water-resistant rating is based on a design evaluation of the manipulator body, power cable, and signal cable, conducted with reference to the applicable standards. This information is provided for reference only and does not guarantee the performance of the robot at the time of shipment or under actual installation and operating conditions.



 <b>WARNING</b>	<p>When installing, comply with the legal regulations regarding the carrying of heavy loads. Carrying loads that are too heavy can cause permanent injury.</p>
 <b>CAUTION</b>	<p>Before installing, transporting or relocating the manipulator, please note the following:</p> <ul style="list-style-type: none"><li>• The manipulator must never be set up, even temporarily, without being screwed onto a solid surface. It could fall over, which could result in damage or injury. If it cannot be screwed down, lay it in a stable position on a solid table.</li><li>• When carrying the manipulator by hand, exercise extreme caution. First, check that your path is free of trip hazards or similar obstacles. Before carrying the robot, place it in a suitable position. Carry it in a way that is comfortable for you and prevents it from slipping out of your hands.</li><li>• Be careful not to squeeze your fingers when placing the robot.</li><li>• If you are travelling long distances, transport the manipulator using a suitable handcart. Ensure that the manipulator is stable on the cart.</li><li>• If the manipulator has been stored at temperatures below 5 °C, it must be left to stand after installation until it has adjusted to the ambient temperature.</li></ul>

### 3.2.1 Packing Pose

To pack the robot in the original packing, the robot should be placed in the position shown in the table below. These values are also used as the default home position of the robot.

Joint	Angle
J1	0°
J2	-37°
J3	132°
J4	0°
J5	85°
J6	0°


### 3.3 Mounting Orientation

The manipulator can be mounted horizontally (typically on a table, but also on racks or on the floor), tilted, on a wall or on a ceiling. Every time the mounting orientation is changed, the manipulator needs to be configured in the AX Portal Safety User Interface, see “AX Portal User’s Guide”.




#### WARNING



Note that the manipulator is configured for horizontal mounting as standard. Any other mounting and a change of mounting orientation requires reconfiguration in AX Portal. Incorrect configuration leads to unreliable behaviour and unexpected movements in hand-guided mode. This is extremely hazardous and can lead to material damage and injury.

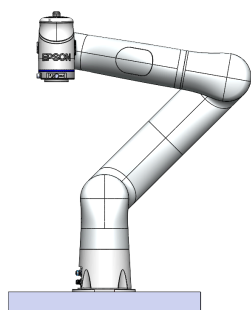


Horizontal mounting.

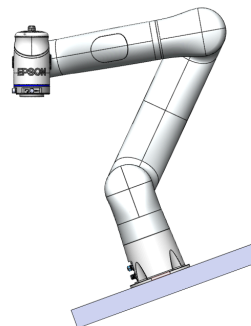

Tilted mounting.

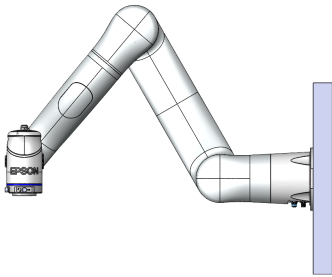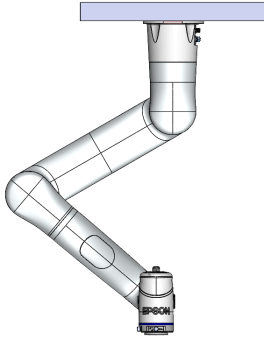	
Wall mounting.	Ceiling mounting.

### 3.4 Installation

 <b>WARNING</b>	<p>Always follow the instructions when working with this robot system:</p> <ul style="list-style-type: none"> <li>• Never operate the robot without an installed emergency stop button. Make sure that an emergency stop button is always accessible. Ignoring this may lead to dangerous situations. For the wiring of the emergency stop button, please check the “Robot Controller RC-A101 Manual”.</li> <li>• Non-collaborative applications: Install the manipulator in a location with sufficient space so that it, including the gripper and payload, can never collide with the safety guarding. Installing the manipulator in a location with insufficient space is extremely dangerous and can lead to serious personal injury and/or serious material damage to the robot system.</li> <li>• Before turning on the power or operating the manipulator, anchor it. Doing so with an unanchored manipulator is extremely hazardous and may result in serious bodily injury and/or severe damage to the robot system, as it may fall down.</li> <li>• Before installation and operation of the manipulator, ensure that it is free from external defects. The manipulator may not operate properly if any of its parts are missing or defective which may result in serious bodily injury and/or severe damage to the robot system.</li> </ul>
---	--

### 3.4.1 Mounting Area

Also, besides the area required for installation of the Manipulator, Controller, peripheral equipment, and other devices, the following space should be provided at a minimum.

- Space for teaching
- Space for maintenance and inspections (for installing jigs and working safely within the safety barriers)
- Space for cables

### 3.4.2 Mounting the Manipulator

The robot is screwed on with four M8 screws. Please note the following:


- Use M8 screws that comply with strength class 8.8 of the ISO 898-1 standard.
- Use a fastening torque of 18 Nm.
- The use of a threadlocker is recommended.
- Please ensure that the threads in the mounting plate can withstand the forces.

Optionally, the manipulator can be precisely positioned with two dowel pins or using the two positioning surfaces to facilitate robot replacement. For the geometry, see the drawing below.



#### **WARNING**

Make sure that the screws which fix the manipulator are always accessible (i.e. not covered). You may have to remove the manipulator in case of an emergency (e.g. when somebody is trapped by the manipulator).

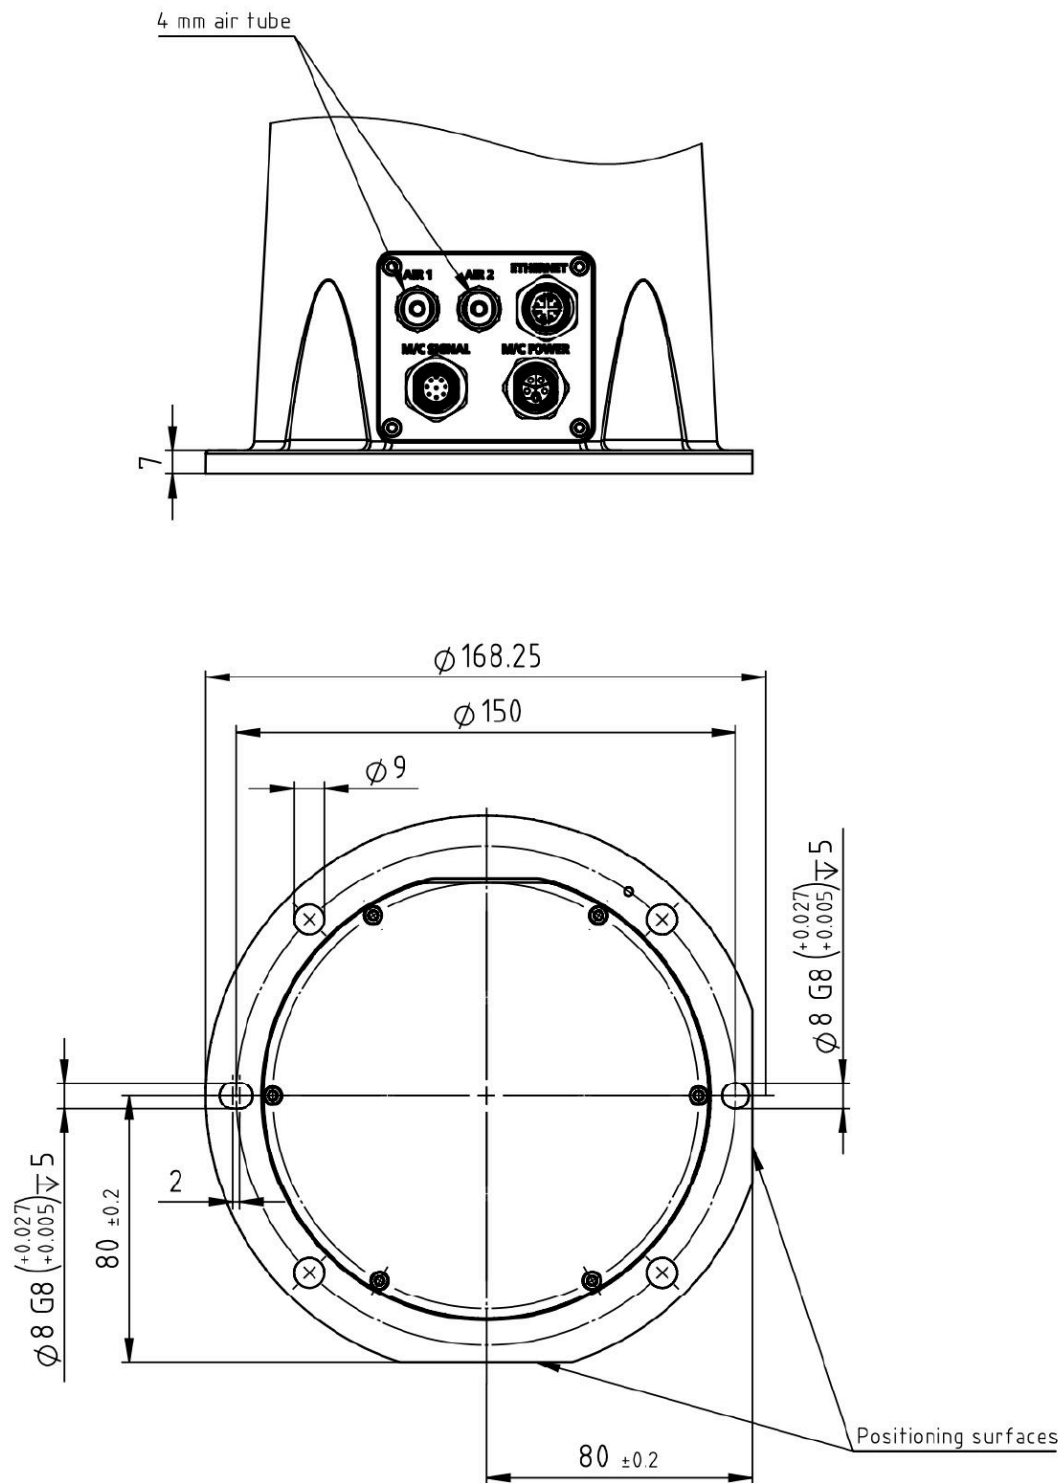

Base of AX6.

### 3.4.3 Mounting Surface Requirements

The mounting surface must support the weight of the manipulator and withstand the dynamic movements of the manipulator. If mounted on a table, it must be ensured that the table cannot move on the floor during robot operation. The mounting surface of the manipulator should have a maximum evenness of 0.2 mm.

The maximum reaction force of the robot is:

	<b>AX6</b>
Max. horizontal rotating torque [Nm]	500
Max. horizontal rotating force [N]	500
Max. vertical rotating torque [Nm]	500
Max. vertical rotating force [N]	1000

### 3.4.4 Connecting the Cables




#### WARNING

Always follow the instructions when connecting or disconnecting cables:

- Only authorized or certified personnel should perform wiring. Wiring carried out by unauthorized or uncertified personnel may result in injury and/or malfunction of the robot system.
- Always turn the controller off before connecting or disconnecting cables. Doing so while the controller is switched on may result in electric shock and/or damage to the robot system.

It is highly recommended to connect the manipulator base to a nearby earth outlet for fixed installations or to the main chassis if used on a DC powered mobile system as shown in the picture below. Use a suitable (class 8.8 or A2) M3x6 screw with a torque of 0.7 Nm.

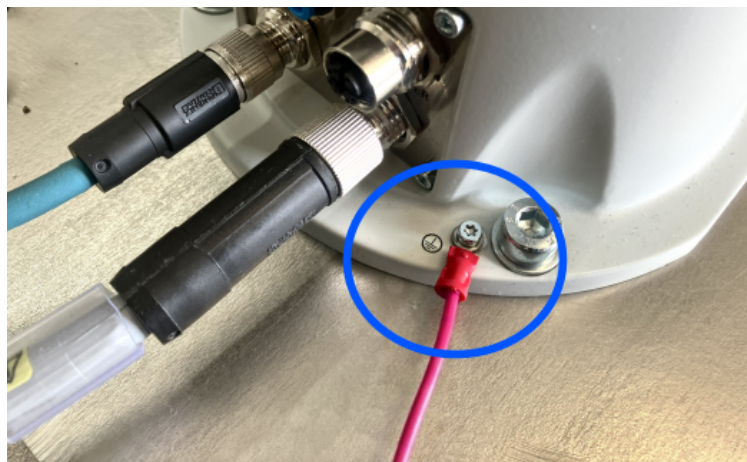


Earth connection of manipulator.

Connect the manipulator and the controller with the following cables:

- Power cable (gray)
- Signal cable (green)

Tighten the cables hand-tight.

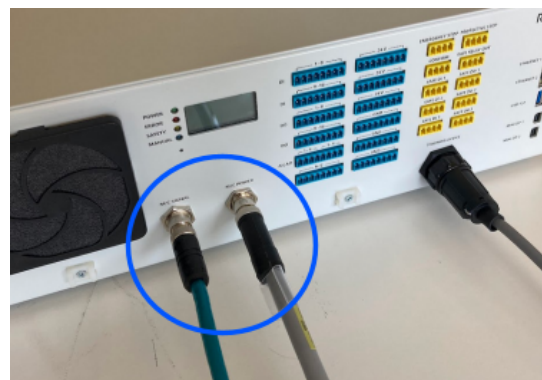


Connecting the manipulator and the controller.

## 3.5 Status Indicators

### 3.5.1 LED Status Ring

The colour of the LED ring at the interface indicates the operation mode of AX Portal.


LED status	Operation Mode	Motor Power	Description
Green	Auto mode	On	–
Blue	Manual mode	On	–
Yellow	Any	On	Any safety feature active (e.g. SS2 Protective Stop, collision)
Red	Safe torque off	Off	Stop due to safety function or error (e.g. emergency stop)
Blinking (any color)	Any	On	Hand-guided control active
Light off	Powered off	Off	–

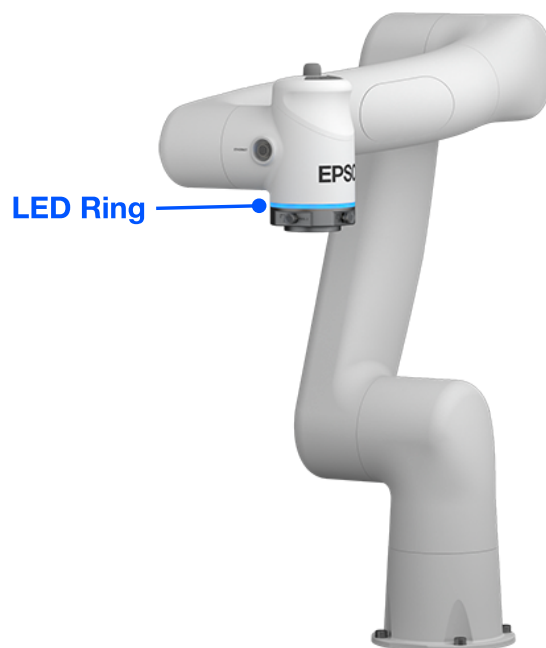

LED Ring




### 3.6 Control Buttons





 <b>WARNING</b>	Do not use the customisable user keys (I and II) to trigger fast movements or other potentially dangerous functions.
---	--

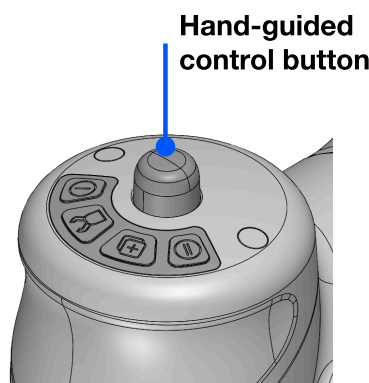There are four control buttons and a safety-rated enabling button on link 5–6:

- Two of the control buttons are predefined. The other two buttons are customisable, see the “AX Portal User's Guide”, and can be used to run functions of AX portal.
- With the enabling button, hand-guided control can be activated.



Control buttons and hand-guided control (HGC) button.

<b>I</b> 	User-defined.
<b>Tool</b> 	If a gripper is configured, it can be opened and closed with this button.
<b>Teach</b> 	Poses can be recorded with this button.
<b>II</b> 	User-defined.
<b>Safety-rated enabling button</b>	<p>This button has three positions: not pressed, pressed to the middle and pressed all the way down:</p> <ul style="list-style-type: none"> <li>• Pressing the button to the middle position puts the robot into hand-guided mode.</li> <li>• If it is pressed all the way down, the robot stops immediately.</li> </ul> <p>The button meets performance level d (TÜV: EN IEC 60947-5-8:2021).</p>


## **4. End-Effector Interfaces**

## 4.1 Introduction

The AX series is compatible with a wide range of grippers. The mechanical ISO interface specified in more detail below and the electrical M8 connections as well as the air connections are supported by a wide range of grippers. Where no standard product is available, customised solutions can be developed by the robot customer.

## 4.2 Weight and Inertia Settings

Note that the weight and inertia of the mounted end effector must be set in AX Portal. See “AX Portal User’s Guide”.


 <b>WARNING</b>	Always update the gripper settings in AX portal after mounting or removing an end-effector. Ignoring this can lead to malfunctions, in particular unexpected movements in hand-guided mode, and to injuries or damage to the robot system.
---	--


## 4.3 Mechanical End-Effector Interface

The end-effector interface represents the interface which allows attaching many standard grippers and other end-effectors. An ISO interface (ISO 9409-1, size 50-4-M6) is available for mounting an end-effector. Using an end effector, please consider the following:

- Use M6 screws that comply with strength class 8.8 of the ISO 898-1 standard.
- Make sure that there is a thread engagement of at least 10 mm.
- Do not exceed a tightening torque of 6 Nm and check the user manual of your end-effector, as some end effectors can only withstand lower tightening torques

The drawing below shows the end-effector interface.

 <b>CAUTION</b>	Only operate the robot with a properly mounted end tool. Otherwise, the tool could detach from the robot, which could cause material damage or injury.
---	--

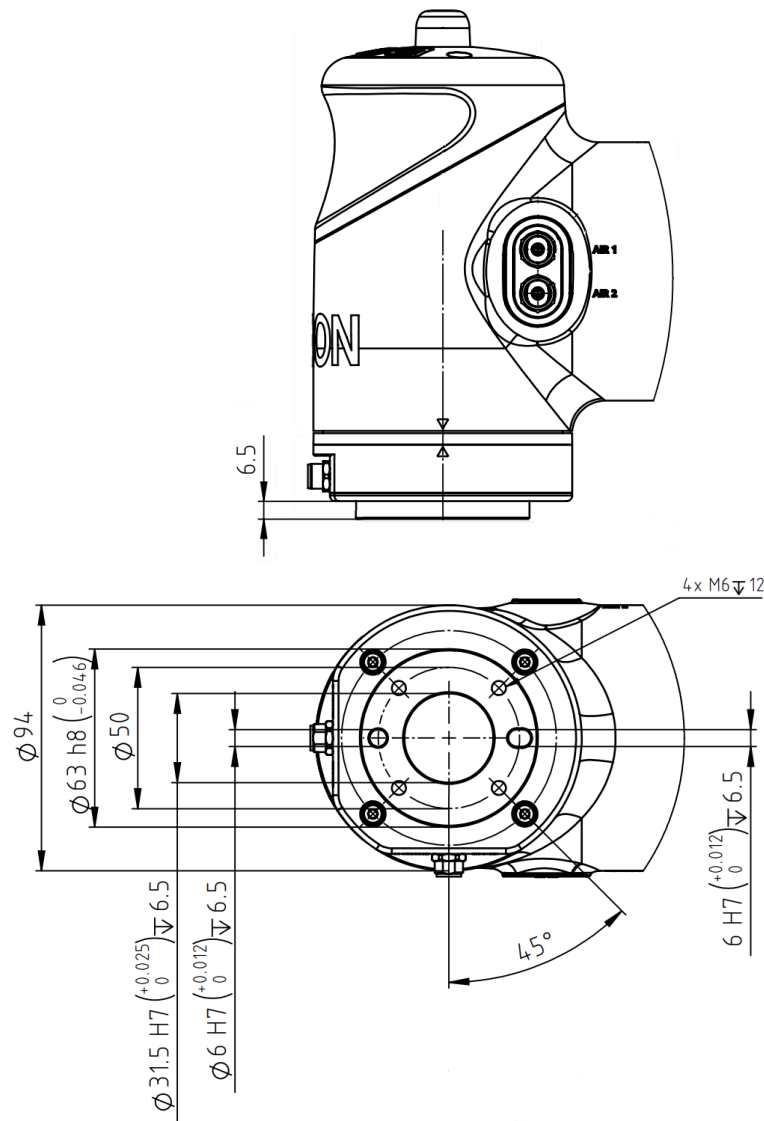

End-effector interface.

## 4.4 Connector Protectors


There are rubber protectors for the air, Ethernet and on each I/O connector on link 5–6 and the end-effector interface.




Ethernet connector protector.



Air connector protector.

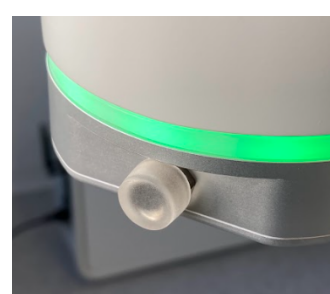


I/O connector protector.



 <b>CAUTION</b>	Note that the rubber protectors must be installed when no connectors are attached to keep the collaborative functionality of the robot. Using the manipulator as a collaborative robot without the protectors can lead to injury.
---	---

4.5 Air Connectors

There are two air tubes inside the manipulator that lead from the base to the end-effector interface. The connector size is for 4 mm tubes; the hoses in the manipulator are 3 mm (inner diameter 2 mm). They might be used for vacuum or compressed air feedthrough.

Do not exceed the maximum pressure of 6 bar (0.6 MPa, 6.11 kgf/cm²).

	Wear safety glasses when using the air tubes.
---	---

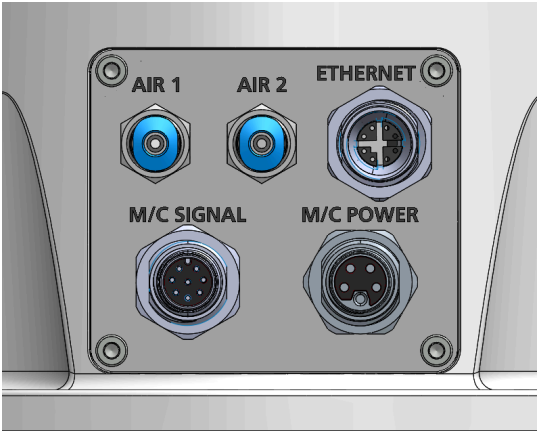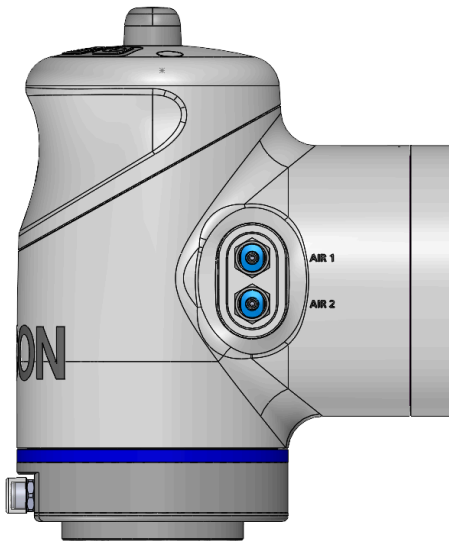
	
Air connectors at the base.	Air connectors at the end tool interface.

## 4.6 Electrical Interface to End-Effector (Tool I/O)

### 4.6.1 Introduction

The following electrical connections are available on the end tool interface and on link 5–6 for connecting end effectors (see also picture below):

- Tool 1 and Tool 2: Digital and analogue inputs and outputs, 24 V power supply. See next section.
- Ethernet line running from the base to link 5–6. See section [Ethernet Line](#).

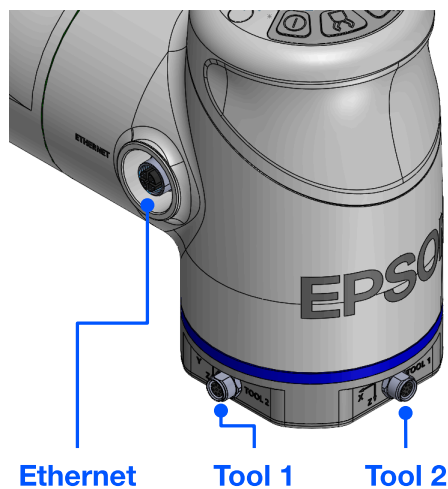

Connectors at end-effector interface.




Be aware that wrong usage of the I/O can damage the robot.

- Do not reverse the polarity of the digital or analog I/Os or exceed any current or voltage limitations.

### 4.6.2 Tool Connector Type and Pin Assignment

The following connector type is used:

- The Tool connectors are type M8, A-code, 8 pin, female. Ordering information for a suitable cable can be found in the table below.
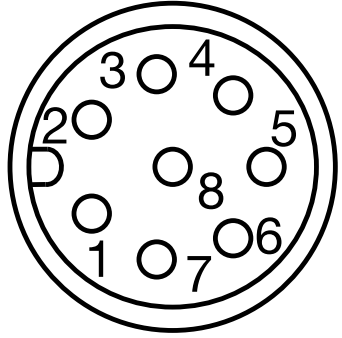
<b>Tool 1</b>	1: Analog I/O 2 2: Analog I/O 1 3: Digital Out 2 4: Digital Out 1	5: 24 V 6: Digital In 2 7: Digital In 1 8: GND	 <p>Connector ref.: Same Sky          CDM809-08A-FW-F010-050-67          Mating cable ref.: Same Sky          CDM817-08A-01MRA-1M-67</p>
<b>Tool 2</b>	1: Analog I/O 4 2: Analog I/O 3 3: Digital Out 4 4: Digital Out 3	5: 24 V 6: Digital In 4 7: Digital In 3 8: GND	

### 4.6.3 I/O Configuration

In AX Portal, the analog and digital IOs can be configured via the “*I/Os Configuration*” panel before powering up the robot.

The digital inputs can be either configured as “*Input*” (default, pull-downs enabled) or “*Input (Pull-Up)*” which disables the switchable pull-down resistors.

Each of the analog I/O pins is a configurable circuit that can function as either an input or an output and can be further configured to operate in either voltage or current mode. This results in the following modes:

- Input – voltage mode
- Input – current mode
- Output – voltage mode
- Output – current mode

Specifications and example connection diagrams are provided in the next sections.

#### 4.6.4 Digital Inputs (Tool I/O)

Each of the digital inputs is a high impedance circuit with a fixed pull-up and switchable pull-down resistor configurations (default is pull-down enabled). The inputs allow for both PNP and NPN type sensors to be used. Example connection diagrams for each of the above configurations are shown below. Note that each of the inputs can be used differently (e.g. Digital In 1 as pull-down enabled and Digital In 2 as pull-down disabled).


<b>Max Input Voltage</b>	24 V
<b>ON Voltage</b>	$\geq 3 \text{ V}$
<b>OFF Voltage</b>	$< 1 \text{ V}$
<b>Input Resistance</b>	14.7 k $\Omega$ (pull-down enabled) 334 k $\Omega$ (pull-down disabled)
<b>Input Current</b>	2.17 mA at 24 V (pull-down enabled) 1.23 mA at 24 V (pull-down disabled)



**CAUTION**

The 24 V and GND connections of the indicated external device should be sourced from the corresponding pins provided from the respective Tool I/O connector used.


Note: The following examples use connector “Tool 1” but connector “Tool 2” has the exact same functionality.

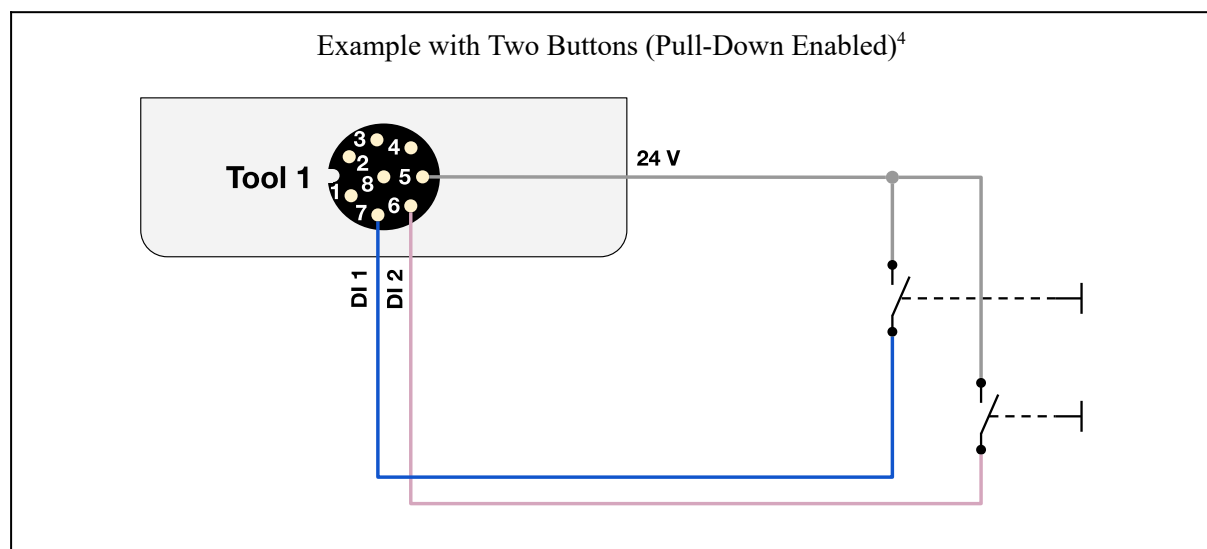


<sup>4</sup> Please note that the wire colors specified in this document comply with the widely used DIN 47100 standard.




Example with Two PNP Type Sensors (Pull-Down Enabled)

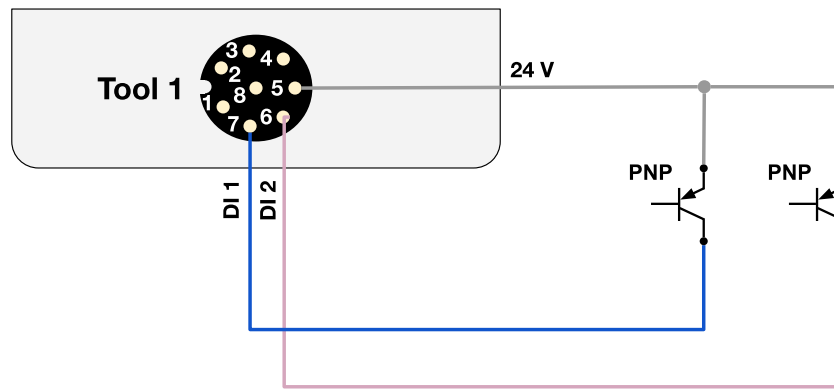

Example with Two Buttons (Pull-Down Disabled)

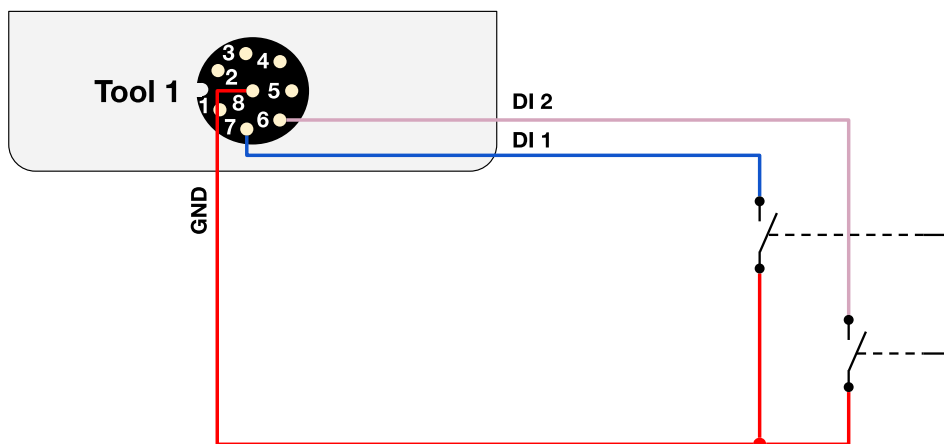

Example with Two NPN Type Sensors (Pull-Down Disabled)

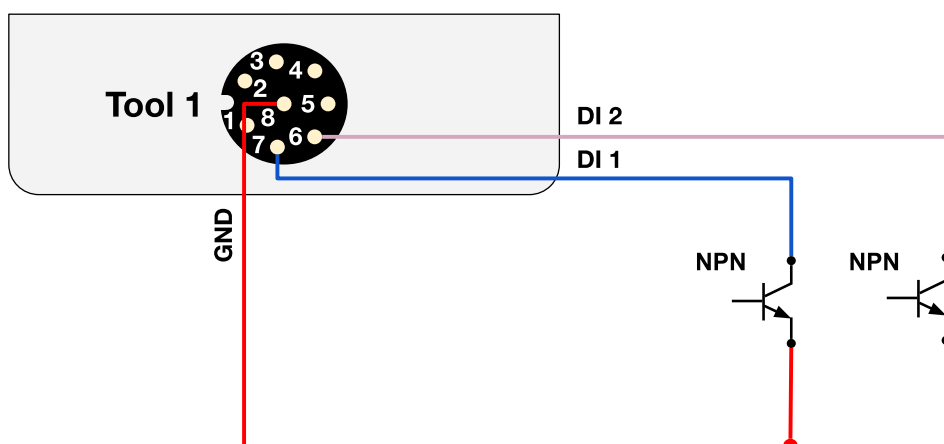

#### 4.6.5 Digital Outputs (Tool I/O)

<b>Output driver</b>	Half-bridge power driver
<b>Output Voltage</b>	24 V
<b>Maximum Output Current (Sourcing or Sinking)</b>	1 A (1.1 A OCP)


Each of the digital outputs is a current limited, push-pull, half-bridge power driver. The driver allows operation in source mode (PNP type), sink mode (NPN type) and a full-bridge type configuration using two outputs. Example connection diagrams for each of the above configurations are shown below. Note that each of the outputs can be used differently (e.g. Digital Out 1 as pull-down enabled and Digital Out 2 as pull-down disabled). The default state of the digital outputs is LOW. For the configuration, see “AX Portal User’s Guide”.




#### CAUTION

The 24 V and GND connections of the indicated external device should be sourced from the corresponding pins provided from the respective Tool I/O connector used. Also note the current limitation of 1 A per pin (and 2 A total) for the Tool I/O connectors.


Example with Two Connected Loads (Source Mode - PNP)

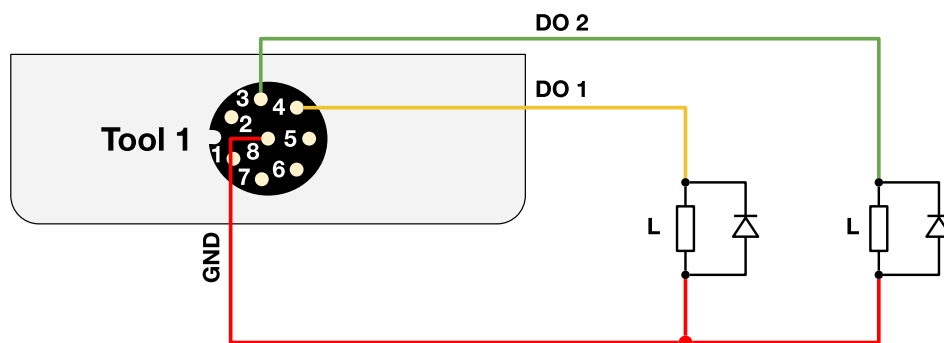

Example with Two Connected Loads (Sink Mode - NPN)

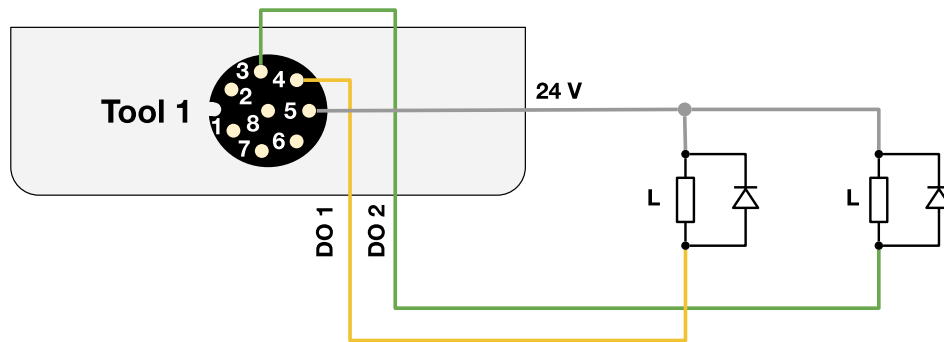

Example with a Connected Motor (Full Bridge Mode)

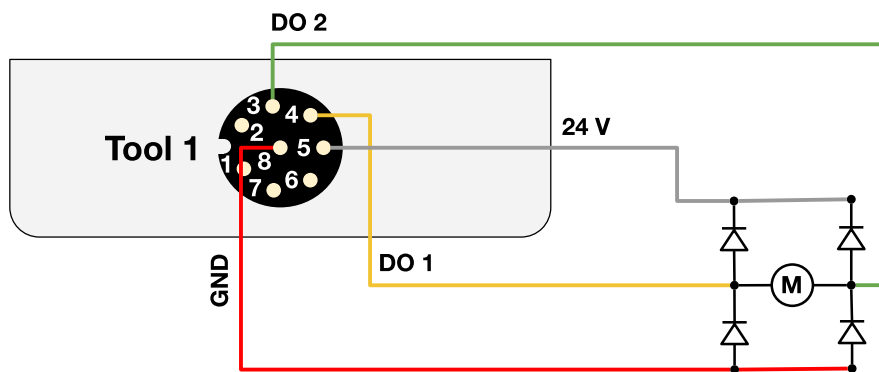**CAUTION****Warning about DC Motor Usage**

For the specific usage of inductive loads such as e.g. brushed DC motors, relays or solenoids, external flyback diodes should be added to contain the back-EMF and re-circulate any excess inertial energy when the motor is switched off.


#### 4.6.6 Analog Inputs (Tool I/O)

Analog Tool I/Os can be configured as inputs in voltage or current mode. In voltage mode, analog readings in the range of 0-10V are possible. In current mode, a sense resistor in the circuit is activated which allows current readings in the range of 4-20mA. An example connection diagram is shown below, which is valid both for current and voltage mode.

Analog Input Configuration

<b>General Specifications</b>	<b>Maximum sampling frequency</b>	20 Hz
	<b>Maximum input voltage</b>	10 V
	<b>Sampling resolution</b>	12 bit
<b>Voltage Mode</b>	<b>Input voltage range</b>	0–10 V
	<b>Input current consumption</b>	< 1 mA
	<b>Minimum local impedance</b>	$\geq 100 \text{ k}\Omega$
<b>Current Mode</b>	<b>Input current range</b>	4–20 mA <sup>5</sup>
	<b>Sense resistance</b>	135 $\Omega$

Example with Two Connected Analog Sensors (Voltage or Current Mode)

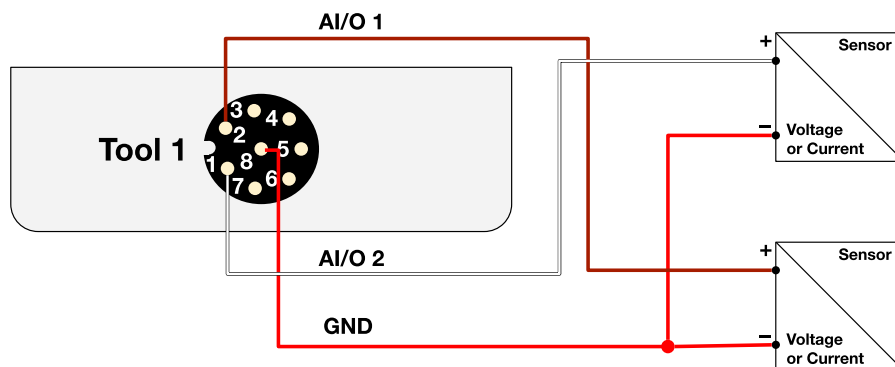

<sup>5</sup> Operation within the 0–20 mA range is permitted, but fault detection is not available.


#### 4.6.7 Analog Outputs (Tool I/O)

Analog Tool I/Os can be configured as outputs in voltage or current mode. In voltage mode, analog outputs in the range of 0-10V are possible. In current mode, an output in the range of 0-20 mA can be generated. An example connection diagram is shown below, which is valid both for current and voltage mode.

Analog Output Configuration

<b>General Specifications</b>	<b>Maximum output frequency</b>	20 Hz
	<b>Output resolution</b>	12 bit
<b>Voltage Mode</b>	<b>Output voltage range</b>	0–10 V
	<b>Maximum output current</b>	1 mA
	<b>Minimum remote impedance</b>	$\geq 50 \text{ k}\Omega$ $\geq 100 \text{ k}\Omega$ recommended
<b>Current Mode</b>	<b>Maximum output voltage</b>	10 V
	<b>Output current range</b>	0–20 mA
	<b>Output load resistance</b>	$< 300 \text{ }\Omega$

Example with Two Connected Analog Sensors (Voltage or Current Mode)

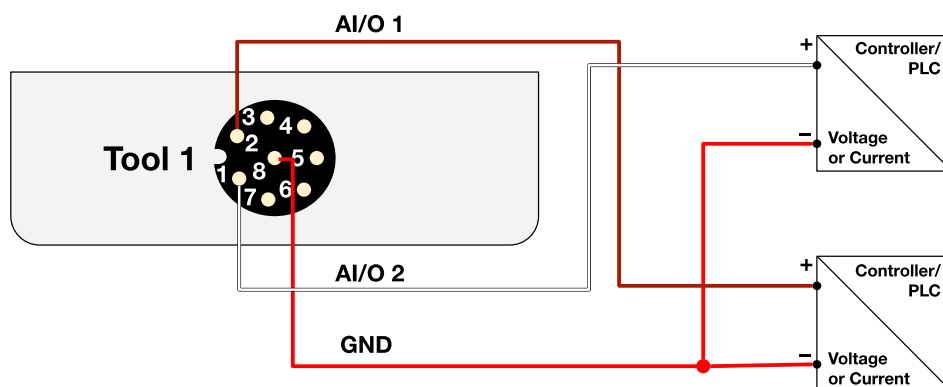

### 4.7 Ethernet Line

The Ethernet goes through the robot from the base to the link 5–6:



The connector type is:

- The Ethernet connector is type M12, X-code, 8 pin, female.

The table below shows the properties of the Ethernet line.

Category	Cat 5e
Data Rate	1 Gbit/s
Power Over Ethernet Support	Supports power over Ethernet (PoE) up to IEEE 802.3at (Type 2) <sup>6</sup>

Make sure that the joint 6 angle is limited when operating the manipulator with plugged Ethernet cables on Link 5–6.

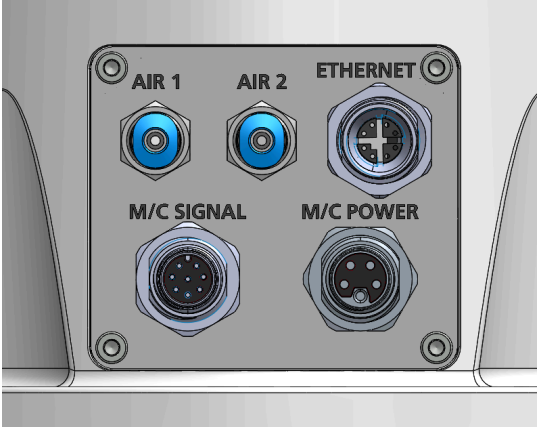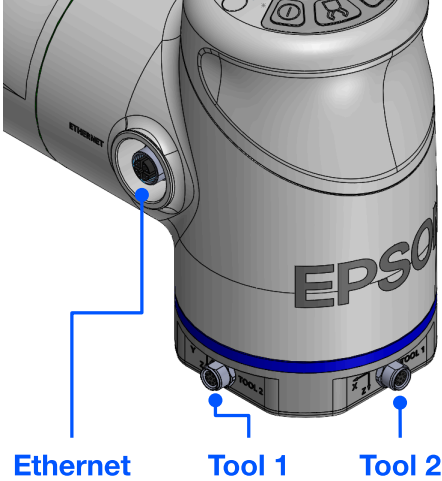	
Ethernet connector at the base.	Ethernet connector at link 5–6.


<sup>6</sup> An additional PoE injector is required to supply power over Ethernet devices (not included in the scope of delivery).


## **5. Maintenance**


## 5.1 Introduction

The AX 6 robot requires very little maintenance. The steps are divided into maintenance and inspection points. The latter are essential for the safe operation of the robot system.

Please note that this section exclusively refers to the manipulator and not to the system in which it is integrated. The integrator must define additional maintenance and inspection points for the system in which the robot is integrated.

 <p><b>WARNING</b></p>	<p>Please note the following points before performing maintenance on the robot system:</p> <ul style="list-style-type: none"> <li>• Switch off the system for any maintenance work. Secure the system against unintentional switching on by third parties, for example with a 'Do Not Turn On' sign. Maintenance work while the system is running can result in serious injury or death.</li> <li>• Only carry out the maintenance work listed in this chapter. Under no circumstances should you attempt to repair a defective robot system yourself. Improperly performed repairs can result in serious injury or death.</li> </ul>
---	---


 <p><b>WARNING</b></p>	<p>Do not open the manipulator or the controller under any circumstances. This may result in electric shock.</p>
--	--

	<p>Wear safety goggles when you need to remove the air hoses during maintenance work – even if the air supply has been turned off.</p>
---	--

## 5.2 Cleaning of the Manipulator and Controller


Clean the outer shell of the robot and the controller if it is dirty:

- Wipe away any dirt on the manipulator with a soft microfibre cloth. For heavy soiling or disinfection, you can moisten the cloth with 70% isopropanol. Be careful not to scratch the paint of the manipulator.

 <p><b>WARNING</b></p>	<p>Never spray any liquid onto the controller, including cleaning agents. If liquid is sprayed onto the controller, it may result in an electric shock.</p>
---	---




## 5.3 Maintenance Inspection

 <p><b>WARNING</b></p>	<p>These checkpoints must be observed to ensure that the robot can be operated safely in the long term. Failure to observe the checkpoints may result in functional failure, injury or even death.</p>
---	--

Check the points listed below.

Inspection Item	Frequency	Location	Method
<b>Loose Screws</b>	Monthly / 250 h <sup>7</sup>	Screws that secure <ul style="list-style-type: none"> <li>• the manipulator</li> <li>• the end effector</li> <li>• the earth cables</li> </ul>	Use a torque wrench to check that the screws/nuts tightened.
<b>Loose Connectors</b>	Monthly / 250 h	External electrical and air connectors on <ul style="list-style-type: none"> <li>• Base</li> <li>• Link 5–6</li> <li>• Tool flange</li> </ul>	Check that connectors are not loose. When the connectors are loose, reattach them properly and check them again.
<b>External Defects</b>	Weekly	Manipulator	Clean the manipulator if it is dirty, see section “Cleaning of the Manipulator and Controller”.
		External Cables	Check the external cables (e.g. supply cables from controller, periphery cables) and the air tubes for external defects. Immediately replace defective cables and air tubes.
<b>Brake Operation</b>	Monthly / 250 h	Joint 1 to 6 brake	Power-off the robot and check whether the brakes engage when the manipulator is moved by hand. If the brakes are working correctly, each axis can only be moved a very short distance before the brakes stop the movement with a clicking sound, or the brakes block the axis completely. If it is possible to move the manipulator with little effort, the brakes are faulty.

<sup>7</sup> If the robot is powered up for more than 250/h per month, execute all monthly items every 250 h.

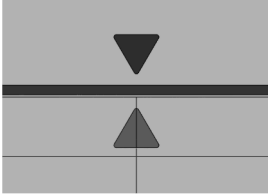			Please also check whether the manipulator moves downwards under its own weight when switched off.
<b>Vibration and Sound</b>	Monthly / 250 h	–	Check the robot for abnormal operating noises or vibrations (e.g. for a loud gearbox).
<b>Zero Position</b>	Yearly	Zero point marks on joint 1 to joint 6. 	Move every joint to 0° and check if the zero marks align.

## 5.4 Repair

The robot has been designed for ease of repair. Repairs shall be performed by properly trained service engineers. For details, refer to the "AX6 / RC-A101 Safety Manual – Knowledge and Training Required to Work with Robot Systems" manual.